



RC1534807/00

Installing Batteries

The remote control requires two AA size (1.5V) batteries to work. Alkaline batteries are required for the proper functioning of this remote.

Tips: replace the batteries every nine months for optimum performance.

1. On the back of the remote control, press the battery cover tab and remove the battery cover.
2. Insert two (2) AA-size batteries, matching the + and - symbols with the battery diagrams inside the battery compartment.
3. Close the battery compartment with the battery cover. Test the remote control by pressing the STB key. The STB key should light up to indicate that batteries are inserted properly.

Controlling Other Devices

In order to control other devices with your Motorola Remote Control you need to tell the remote control what types of devices you have. Section 1 brings you through the steps needed to do this. When you do this the volume and channels will always work on the Receiver no matter what mode you are in. If you want to change this or allow the POWER key to affect multiple devices then you can also follow the steps in Section 2. Sections 3 and 4 are optional if you want to reset any of the settings.

1. Programming the remote to control other devices

To use the remote control for your other devices, you will need to program the TV, DVD and AUX mode keys to control the devices (section A). Please refer to the Manufacture Code List, found in this manual, for a list of supported brands and models. If you have an integrated or combination unit, such as a TV/DVD unit, each component of the unit will normally be programmed separately. If your device is not supported you will need to use section B on "Using the Automatic Search".

Note:

The AUX may be programmed to operate a VCR, Home Theater In the Box (HTIB), receiver or amplifier.

A. Manual Programming

Use the following steps to program the TV, DVD or AUX mode keys:

1. Power on the device you want to program
2. Locate the 4-digit set up code for the device you want to program from the Manufacture Code List in this manual
3. Press and hold the appropriate mode key (TV, DVD or AUX) on the remote control
4. Without releasing the chosen mode key, press and hold the OK key simultaneously
5. Release both the mode key and the OK key
 - All the mode keys should flash twice
6. Enter the 4-digit set up code by pressing the number keys (0-9) on the remote control
 - The mode key will flash three times indicating correct entry and return to normal operation
 - When an invalid code is entered, the selected mode key will give a long flash to indicate that you have not entered the set up code correctly
 - Should the remote control time-out before you complete the code setup, you will need to start over
7. Point the remote control at the programmed device and press the power key once
 - The device should turn off
 - If it does not turn off, repeat steps 2 through 6 trying each code for your brand until you find the correct code
8. Repeat steps 1 through 7 to program another device.

Now that your devices are programmed, you can press the appropriate mode key on the remote control to work with the selected device. To use the remote control for your Receiver again, press the STB mode key.

B. Using the Automatic Search

You can search the remote control memory for your 4 digit manufacture device code. Also use this function if the code for your device is not listed in the Manufacture Code List.

1. Turn on the device you wish to program
2. Point the remote control at the device
3. Press and hold the mode key (i.e. TV, DVD or AUX) you want to program
4. Without releasing the selected mode key, press and hold the OK key simultaneously
5. Release both the mode key and the OK key
 - All the mode keys will flash twice indicating programming mode
6. Enter 922 by pressing the number keys on the remote control
 - The selected mode key will flash twice indicating correct entry

(For AUX searching only, press and release the PLAY key then press

1 for VCR

2 for Receiver/Tuner

3 for Amplifier

4 for Home Theater In The Box (HTIB)

-The AUX mode keys will flash twice indicating correct entry

7. Press and hold the PLAY key and wait until the device turns off, then release the PLAY key.
 - The REW key can be utilized to go back through the codes one at a time
 - The FF key can be utilized to move forward through to codes one at a time
 - Press the PLAY key to resume auto search of device codes

8. To save the code press the ENTER key on the remote control (bottom right) or press the EXIT key to return to normal operations
 - The selected mode key will flash three times and return to normal operation

9. If no valid code is found, the green backlight will flash 2 times and the remote control will return to normal operation.

10. Turn the device back on and use the remote to control your device. Now that your devices are programmed, you can press the appropriate mode key on the remote control to work with the selected device. To use the remote control for your Receiver again, press the STB mode key.

- You may need to repeat steps 1 through 8 to find a code

Note:

- If any other key is pressed except PLAY, ENTER, POWER, EXIT, REW, FF, or number keys 1 to 4 the selected mode key will give a long red flash (error message) and the remote control will return to normal operation and you will need to start over.

- If you are interrupted while you are programming, the remote control may time-out before you complete the code setup and you will need to start over. This is indicated by two quick flashes of the green backlighting.

2. Setting up your volume, channel and power options

The defaults for your power, volume and channel control are that they always send the codes to the Receiver no matter what mode you are in. Thus in DVD mode, the volume still controls the Receiver, etc.

If you would like to change this follow these instructions:

A. Volume Control Set Up Options

The volume commands are always sent to the Receiver until the TV mode key is programmed. Then the volume commands are sent to the TV from all mode keys. If you'd like the volume commands to still be sent to just one device, but that it be a different device (for example a home theater setup) then follow the instructions in Section I. If you'd like the volume commands sent to different devices depending on which mode you are in then go to Section II.

I. Volume Always Controls the Same Device

1. Press and hold the STB key on the remote control
2. Without releasing the STB key, press and hold the OK key simultaneously
3. Release both the STB key and the OK key
 - All the mode keys will flash twice indicating programming mode
4. Enter 955 by pressing the number keys on the remote control
 - The STB key will flash twice indicating correct entry
5. Press the mode key that you want to always receive the volume commands
 - The selected mode key will flash three times indicating successful assignment and return to normal operation

The volume commands will now go to the selected device no matter what mode you are in.

II. Volume Control Depends on Device Selected

The volume setting can also be re-configured to independently control the volume associated with each device. (E.g. In AUX mode the receiver controls the audio; In TV mode the TV controls the audio)

1. Press and hold the STB key on the remote control
2. Without releasing the STB key, press and hold the OK key simultaneously
3. Release both the STB key and the OK key
 - All the mode keys will flash twice indicating programming mode
4. Enter 955 by pressing the number keys on the remote control
 - The STB key will flash twice indicating correct entry

5. Press the ENTER key
 – The STB key will flash three times indicating successful assignment and return to normal operations
- B. Channel Selection Set Up Option**
 By default the remote control will always send channel commands to the Receiver no matter what mode you are in. This will prevent accidental TV channel changes while in TV, DVD or AUX modes.
- Channel selection can also be re-configured to independently send channel commands to different devices depending on what mode you are in (e.g., In STB mode the remote sends channel commands to the Receiver; In TV mode the remote sends channel commands to the television). To do this, follow these instructions:
1. Press and hold the STB key on the remote control
 2. Without releasing the STB key, press and hold the OK key simultaneously
 3. Release both the STB key and the OK key
 – All the mode keys will flash twice indicating programming mode
 4. Enter 966 by pressing the number keys on the remote control
 – The STB key will flash twice indicating correct entry
 5. Press the device mode key that you wish to provide channel control
 6. Press the ENTER key
 – The STB key will flash three times indicating successful assignment and return to normal operation
- Note:**
If you press any key other than the mode keys or ENTER the STB key will give a long red flash and the remote control will return to normal operation. Should the remote control time-out before you complete the procedure you will need to start over.
- C. Power Control Set Up Options**
 By default, the POWER key only powers ON or places your Receiver in Standby mode. Unless you have programmed the TV mode key then the TV and Receiver will both be powered ON/OFF simultaneously. You also have the option to turn ON/OFF TV, DVD and AUX mode devices individually by pressing the applicable mode key then the POWER key.
- To Have Multiple Devices Power Off with the Power Key**
 If you would like other devices to be powered on/off simultaneously with the POWER key then follow these instructions for the additional devices (for a total of 4).
1. Press and hold the STB key on the remote control
 2. Without releasing the STB key, press and hold the OK key simultaneously
 3. Release both the STB key and the OK key
 – All the mode keys will flash twice indicating programming mode
 4. Enter 977 by pressing the number keys on the remote control
- The STB key will flash twice indicating correct entry
5. Press the STB key on the remote control
- The STB key will flash twice indicating correct entry
6. Press the TV key on the remote control
- The TV key will flash twice indicating correct entry
7. Press each additional mode key that you wish to include such as the DVD key or AUX key
- The selected mode key will flash twice indicating correct entry
- If you want to include both mode keys repeat step 7 selecting the other mode key
8. Press the ENTER key to complete
- The last mode key selected will flash three times indicating successful assignment and return to normal operation
- Note:**
If you press any key other than the mode keys or ENTER the STB key will give a long red flash and the remote control will return to normal operation. Should the remote control time-out before you complete the procedure you will need to start over.
- If the devices that you have programmed to turn ON/OFF at the same time get out of sync so that some turn ON and others turn OFF you will need to manually turn OFF the out of sync devices and then press the POWER key to turn them all back ON. It is important to point the remote directly toward the devices for this to work properly.*
- To change the number of devices controlled by the POWER key, you must start at Step 1 and continue until all desired devices have been programmed.*
- 3. Changing and Removing Codes**
- A. Mode Deactivation**
 To deactivate a mode key, follow these steps:
1. Press and hold the appropriate mode key (TV, DVD or AUX) on the remote control
 2. Without releasing the chosen mode key, press and hold the OK key simultaneously
 3. Release both the mode key and the OK key
 – All the mode keys should flash twice
 4. Enter the appropriate 4-digit code from the list below depending on the mode you are deactivating:
 – TV 1254
 – DVD 2254
 – AUX 3254
 – The mode key will flash three times indicating correct entry and return to normal operation
 – When an invalid code is entered, the selected mode key will give a long flash to indicate that you have not entered the code correctly
- The STB key will flash twice indicating correct entry
- Should the remote control time-out before you complete the setup, you will need to start over
- B. Reassigning Your Mode Keys To Another Device**
 The TV, DVD and AUX keys are already set up to control specific devices:
- TV key: TV & HDTV
- DVD key: DVD
- AUX key: VCR, Home Theater In The Box (HTIB), Receivers and Amplifiers
- You may reassign these mode keys to operate another type of device. For example, you can control a second DVD player in AUX mode, the same way you control the first DVD player in DVD mode.
1. Press and hold the STB key on the remote control
 2. Without releasing the STB key, press and hold the OK key simultaneously
 3. Release both the STB key and the OK key
 – All four mode keys will flash twice to indicate programming mode
 4. Enter programming code 902 by pressing the number keys on the remote control
 – The STB key will flash three times indicating you have successfully entered the code to set all of the mode keys as inactive and the remote will return to normal operation
- Note:**
If any other key is pressed except the number keys the STB key will give a long red flash and the remote control will return to normal operation. Should the remote control time-out before you complete the procedure you will need to start over.
- B. Resetting the Volume, Channel and Power Programming:**
1. Press and hold the STB key on the remote control.
 2. Without releasing the STB key, press and hold the OK key.
 3. Release both the STB key and the OK key
 – all four mode keys will flash twice to indicate programming mode
 4. Enter programming code 902 by pressing the number keys on the remote control.
 – The STB key will flash three times indicating you have successfully entered the code to set all of the mode keys as inactive and the remote will return to normal operation
- Note:**
If any other key is pressed except the number keys the STB key will give a long red flash and the remote control will return to normal operation. Should the remote control time-out before you complete the procedure you will need to start over.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**
1. this device may not cause harmful interference, and
 2. this device must accept any interference received, including interference that may cause undesired operation.
- B0063440

TV including LCD, Plasma, and Panel

Save Code list for future use. Refer to the setup procedure below and look up the 4 digit code for your brand of TV, DVD, etc., from the list below. Refer to your REMOTE User's Manual for more information.

Plasma, and Panel	CURTIS MATHEWS	0031 0105 0130	HYUNDAI	1134	MITSUBISHI	0005 0151 0051 0004	RADIO SHACK	0031 0004 0048 0049	TEKNIKA	0031 0004 0005 0009	COLORTYME	0234	MARTA	0245	SANSUI	0310 0376 0377	CASIO	0777	
ABEX	0085	0004 0009 0000 0049	ILO	0198 1070 1024 1023	MONIVISION	0036	0005 0103 0105 0109 0170	0053 0170 0009 0227 0342	COLT	0051 0035 0105 0109 0170	MATSUSHITA	0292	SANSUI	0394 0256 0967 0303	CENTRIOS	0783			
ACER	1163	0109 0358 0001 0015	CXC	0053 0042	IMA	0053	0000 0012 0041 0042 0095	0000 0174 0001 0008 0012 0042	CRAIG	0245 0354 0356 0248	MEDION	0896	SANYO	0232 0304 0267	CITIZEN	0826			
ACME	0016	0058 0017 0010 0126 0018 0127 0019	IN FOCUS	0000	MONTGOMERY WARD	0031	RCA	0031 0004 0048 0054 0094 0100	TELECAPTION	0117	CURTIS MATHEWS	0225 0287 0227	MEI	0292	SCOTT	0268 0354 0248 0416	CURTIS MATHEWS	0777	
ADA	0006	0103 0189 0217 0135 0133 0116 0167	INFINITY	0144	DAEWOOD	0062 0288	0102 0107 0129 0191 0005 0009 0000	0162 0163 0342 0003 0015 0022 0096	TERA	0004 0186	MEMOREX	0287 0245 0268	DENON	0240 0250 0257	DENON	0670			
ADC	0001 0010	0118 1180 1175 1171	DAEWOO	0130 0004 0009 0100 0005	INITIAL	1070 0146 1085 1109	0138 0043 0140 0039 0044 0080 0042	0113 0125 0179 0187 0188	TEVION	0198	DAEWOO	0279 0240 0250 0252	SEARS	0363 0245 0268 0287	FISHER	0667 0675 0676 0677 0718			
ADMIRAL	0135 0020 0226 0001	0058 0017 0010 0126 0018 0127 0019	IN SIGNIA	0006	MONITOR	0053	0004 0005 0009 0105 0109 0014	0053 0170 0009 0000	REALISTIC	0031 0004 0048 0049 0049	DAEWOO	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
ADVENT	1171 0116 0167 0176 0922	DAYTRON	0004 0009	DAYTRON	0004	0103 0189 0217 0135 0133 0116 0167	0118 1180 1175 1171	REALISTIC	0031 0004 0048 0054 0094 0100	TELECAPTION	00117	CURTIS MATHEWS	0225 0287 0227	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777		
ADVENTURA	0174	0118 1180 1175 1171	DEL	0210 0948	DAEWOOD	0020 0003	0120 0028 0095	0148 0456 0029 0095 1406 1407 1408	DAEWOOD	0020 0003	DAEWOOD	0279 0240 0250 0252	SEARS	0363 0245 0268 0287	FISHER	0667 0675 0676 0677 0718			
AIKO	0058	0195 0196 0227 0269	DIAMOND VISION	0092 0896	INTEQ	0012	0163 0342 0003 0015 0022 0096	0162 0163 0342 0003 0015 0022 0096	MOTEVA	0049 1013	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
AIWA	0195 0196 0227 0269	DIGIMATE	1017	JBL	0062	0167 0132 1020 1151 1152	1019 0165 0118 0116	JBL	0009 0003 0100 0095 0141	IN SIGNIA	0031 0004 0005 0009	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777
AKAI	0105 0002 0077 1137	DIGISTAR	1019 0165 0118 0116	JC PENNEY	0031 0004 0005 0009	0105 0107 0109 0054 0000 0087	0105 0107 0109 0054 0000 0087	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777		
ALLERON	0051	1138 1105 1113 1139	DIGITAL	0059 0072	DIMENSIA	0031 0000	0008 012 0015 0022 0030 0052	0008 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
AMARK	0020	0121 0004	DUKANE	0053 0022	DUMONT	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
AMTRON	0053	0133 0189 0193 0194	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
ANAM NATIONAL	0053 0003	0133 0189 0193 0194	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
AOC	0004 0005 0009 1009	0025 0042 0193	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
APEX	0214 0216 0215 1132 0401	0004 0009 0009 1009	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
ARCHER	0020	0121 0004	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
ASPECT	0059	0153 0175 0177 1135	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
AUDIOVOX	1164 1165	0053 0109 1117 1117	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
AUDIOVOX	0053 0109 1117 1117	0004 0009 0009 1009	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
AXION	0177	0118 1171 1171 1171	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
BANG & OLUFSEN	0190	0004 0009 0009 1009	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
BELCOR	0004	0133 0049 0051 0189 0053 0147	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
BELL & HOWELL	0031 0049	0039 0130 0210 0227 0233 0265	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
BENQ	0081 0083 0101 1150	0004 0002 0023 0024 0179 0045	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
BLUESKY	1155 0144	0025 0027 0030 0032 0034 0035 0037	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
BRADFORD	0053	0134 0049 0051 0189 0053 0147	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
BROKSONIC	0147 0145	0026 0310 0325 0456 0040 0041	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
BROKWOOD	0004	0042 0021 0023 0024 0179 0045	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
CANDLE	0004 0009 0174 0008	0004 0009 0174 0008	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
CAPEHART	0175	0051 0189 0053 0147	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
CCE	1153	0122 0456 0042	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
CELEBRITY	0002	0121 0004	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 012 0015 0022 0030 0052	NET TV	0046 0124	DAEWOOD	0334 0242 0244 0251 0971	GENEXXA	0369 0394 0456 0248	SCOTT	0268 0354 0248 0416	CURTISS MATHEWS	0777	
CELERITY	0214	0031 0107 0164 0004	ELECTROHOME	0004 0009	ELECTROHOME	0004 0009	0009 012 0015 0022 0030 0052	0009 0											

CD, cont.

SIRIUS	0746 0684	NOVAPLEX	0528	CENTURY	0547	SAMSUNG	0594 0583 0613	CLASSIC	0431 1051 0401	KOSS	0415 0388	SAMSUNG	1389 1388 1387 0407	ECHOSTAR	0655 0647	JVC	.0964	
SKYFI	0725	NOWTV	1045	CHANNEL MASTER	0577 0578 0579	SHARP	0616 0619 0540	COBY	0926 0946 0947 0916 0445	KXD	0894	EMTEC	1385 1386	KLH	.0906			
SONY	0753 0323 0778 0779	NSC	0487	CHAPPARAL	0560 0561	SHARP	0604	0928 0894 1091 1101 1111 1112 1124	CONCEPT	0430	SAMPO	0417	EXPRESSVU	0647 0655	KOSS	.0415		
TEAC	0676 0689 0699	OAK	0476 0489	CHEYENNE	0561	SIERRA I II III	0561	CONIA	0445	LENOXX	0931 0435 1087 1088	SANSUI	0394 0967	FORTEC STAR	0569 0555 0556	LENOXX	.0931	
TECHNICS	0709 0710 0711 0856	PACE	0532	COOLSAT	1036 0546	SKY NETWORK	0542 0541 0614	CONIA	0445	LG	1404 1400 0405 0972 0907	SANYO	0904 0449 0416	HUGHES	.0580	JG	.0972 1404	
THETA DIGITAL	0716 0733 0820 0862	TAO	0725	PANASONIC	0460 0508	DIGIWAV	0615 0646 0537 0538 0539	CONTEL	1401	LINN	0443	SEARS	0394 0456	HUGHES NETWORK	0621 0580	MAGNAVOX	.0915	
TOSHIBA	0731	TEAC	0710 0807 0855 0856 0857	PARAGON	0486	DIRECTV	1049 1766 1767 1768 0622	CRITERION	0448	LITEON	0982 0902 0898 0959 1069	SEG	0428	HUMAX	.0912	[0969 & 0756] [0408 & 0756]	MYRON & DAVIS	.0962
VICTOR	0721	TECHNICS	0791 0810 0815	PHILIPS	0471 0479 0485	STAR SIGHT	0633	CURTIS INTERNATIONAL	0929	LIQUIDVIDEO	0921	SELECTRON	1077 1078 1079	ILLICO	0506	ILO	.0959	
YAMAHA	0665 0712 0713 0724 0846	TEVION	0823 0863 0864	0490 0491 0492	STAR TRAK	0608	STAR TRAK	0928 0894	MAGNAVOX	1409 0989 0408 0458	1080 1081 1082 1083	SAMSUNG	1389 1388 1387 0407	ECHOSTAR	0655 0647	JVC	.0964	
ZENITH	0676 0730 0759 0784 0850	VENTURER	0745	PHILIPS-MAGNAVOX	0505 0534	PHILIPS-MAGNAVOX	0640 0645 0627	STARCHOICE	0931 0435 1087 1088	COBY	0926 0946 0947 0916 0445	EMTEC	1385 1386	KLH	.0906			
Audio		VIZIO	0660 0883	PIONEER	0494 0478 0506 0493	DISH NETWORK	0628 0655 (A)	SIERRA I II III	0561	CONCEPT	0430	SAMPO	0417	EXPRESSVU	0647 0655	KOSS	.0415	
WONDER	0762	PULSAR	0486	DISHPRO	0588 0589 0590 0590	DISH PRO	0647 (B) 0612 0654 0588 0589 0590	DAEWOO	0440 0441 0444 0971 0965	LENOXX	0931 0435 1087 1088	SANSUI	0394 0967	FORTEC STAR	0569 0555 0556	JVC	.0964	
XM RADIO	0708 0725	QUASAR	0486	RADIO SHACK	0517 0505 0534 0525	RADIO SHACK	0562 0574 0587	DRAKE	0547	LENNOX	0931 0435 1087 1088	COBY	0926 0946 0947 0916 0445	EMTEC	1385 1386	KLH	.0906	
AIWA	0839 0842 0851 0860	YAMAHA	0801 0802 0838 0840 0841	RCA	0460 0471 0507	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	KOSS	.0415	
APEX	0436	YAMAHA	0846 0847 0848 0849 0876	RCN	0529	YAMAHA	0657 0659 0667 0619 0537 0538 0539	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
APPLE iPod	0885	ZENITH	0676 0730 0749 0759 0765	REALISTIC	0469	YAMAHA	0657 0659 0670 0619 0537 0538 0539	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
BOSE	0672 0774 0775	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
CARVER	0825	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
CENTRIOS	0762 0763	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
CITIZEN	0826	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
CRITERION	0448	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
DELPHI	0708	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
DENON	0803 0817 0852	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
DURABRAND	0776	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
FISHER	0814 0821	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
GOLDSTAR	0766	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
HARMAN KARDON	0804 0818	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
IN SIGNIA	1066	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
iPOD	0884	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
JVC	0790 0813 0819	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
KENWOOD	0881 0863 0808	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
TELEVISION	0816 0828 0832 0869	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
KODA	0763	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
KOSS	0415	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
MAGNAVOX	0796 0814 0915 0756	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
MARANTZ	0688 0824	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
MITSUBISHI	0877	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
NAD	0721 0739 0743	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
NEON	0854	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
NEXTTECH	1066 1055 0780 0782	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
OPTIMUS	0752 0759 0760 0777	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	
PIONEER	0754 0752 0751 0880	REGAL	0486	YAMAHA	0766 0784 0814 0787 0850 0405	YAMAHA	0630 0634 0636 0638 0641 0652 0653	STAR TRAK	0608	STAR TRAK	0928 0894	COBY	0926 0946 0947 0916 0445	EXPRESSVU	0647 0655	JVC	.0964	