



**RC1534849/01B**

#### Battery Installation

1. On the back of the remote, push down on the tab and lift the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert 2 AA alkaline batteries.
3. Press the battery cover back into place.

#### Programming the remote to control other devices

The remote control will only control the device which is selected by the appropriate mode key (STB, TV, DVD, and AUX). The mode key light for the selected device flashes each time a valid key is pressed. In order to control other devices with your MXv3 Remote Control, you need to tell the remote control what types of devices you have. Sections A and B take you through the steps needed to do this. The volume controls will control your Set Top Box (STB) until the TV device mode is setup. The channel controls will always control your STB. If you want to change this, you should follow the steps in Sections E & F.

To use your Remote Control for your other devices, you will need to setup the TV, DVD and AUX mode keys to control the devices (Section A).

Please refer to the code list (on separate sheet) for a list of supported brands and models. If you do not find the brand of your device on the supported code list, please refer to section B for the search function or you may use section C for instructions on the learning feature of your remote control.

If you have an integrated or combo unit such as a TV/DVD, each component of the unit may need to be setup separately by setting up both the TV and DVD mode keys.

**NOTE:** The DVD and AUX mode keys can be setup with any code. The TV mode key can only be setup with TV codes.

#### A. Manual Programming

Use the following steps to setup the TV, DVD or AUX mode keys:

1. Power on the device you want to program and locate the 4-digit code from the code list.
2. Press and hold the mode key (TV, DVD, or AUX) and while holding it pressed, press the OK key for one second.
3. Release both keys, all of the mode keys will flash then the selected mode key light will stay lit.
4. Enter the 4-digit code by pressing the numerical keys (0-9). The selected mode key light will blink for each digit entry and will remain off after the entry of the fourth digit - indicating a successful setup.
5. Point the remote control at the selected device and press the power key once. The device should turn off. If the device stayed on, repeat the steps 2 thru 5 trying each code for your brand until you find the correct code.

Repeat the steps on the previous page to setup another device. To use the remote control for your Set Top Box, press the STB mode key.

**NOTE:** If an invalid code is entered or no key is pressed at all for 30 seconds, the mode key light flashes for 3 seconds and turns off. The remote control returns to normal operation and you will need to start over from step A2 to setup the device.

#### B. Using the Search Function

To search for a particular device code for DVD or AUX e.g. VCR, use the Manual Programming for section A and program DVD or AUX with any VCR code prior to starting a search.

1. Turn on the device you want to control and point the remote at that device.

2. Press and hold the mode key (TV, DVD, or AUX) and while holding it pressed, press the OK key for one second.

3. Release both keys, all of the mode keys will flash then the selected mode key light will stay lit.

4. Press the power button repetitively until the selected device turns off. Once your device has turned off, press OK to save the code.

5. To indicate a successful setup, the selected mode key will turn off and you are ready to setup another device by following steps 1 thru 4 of this section.

#### C. Volume Control Setup Options

The volume controls will control your Set Top Box until the TV device mode is programmed, e.g. if DVD mode is selected then volume controls your STB. If TV mode is programmed and DVD mode is selected, then volume controls your TV.

If you'd like the volume commands to operate from just one device, e.g. always TV, then follow the instructions in Section E-I. If you'd like the volume commands to be sent to different devices depending which mode you are in, then follow the instructions in Section E-II.

#### C-I. Volume Always Controls the Same Device

1. Press the TV key and while holding it pressed, press the OK key for 1 second.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and hold the MUTE key for 3 seconds until the TV mode key light briefly turns off then remains on. Press and release the mode key that you always want to operate the volume commands (STB, TV, DVD, and AUX). The selected mode key light will remain on.

4. Press and release the MUTE key to save the setting. The selected mode key light will turn off indicating a successful setup. The volume commands will be setup for the selected device despite what mode is selected. If the selected mode key light flashes for 3 seconds and turns off, then the selected mode will have no volume commands of its own and will need to start over from step 1 above and select a different mode to program the device.

#### E-II. Volume Control Depends on Device Selected

1. Press and hold the TV key and while holding it pressed, press the OK key for one second.

2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.

3. Press and hold the MUTE key for 3 seconds until the TV mode key light briefly turns off then stays on, then release the MUTE key.

4. Press and release the MUTE key to save the setting. The TV mode key light turns off indicating successful setup. The volume commands will now work for different devices.

**NOTE:** If a programmed mode key has no volume commands of its own, then the volume control will normally operate the TV. If an invalid key is pressed, the selected mode key light flashes for 3 seconds and turns off. The remote control returns to normal operation and you will need to start over.

If no key is pressed within 30 seconds, the remote control times out, the selected mode key light flashes for 3 seconds and turns off. The remote control returns to normal operation at which time you can start over.

#### D. Channel Control Setup Options

The channel controls (Channel Up/Down, 0-9 and LAST) will always work your Set Top Box. If you'd like the channel commands to be sent to different devices depending which mode you are in, then follow the instructions in Section F-I.

#### D-I. Channel Control Depends on Device Selected

1. Press and hold the TV key and while holding it pressed, press the OK key for one second.
2. Release both keys, all of the mode keys flash followed by the TV mode key light remaining on.

3. Press and hold the LAST key for 3 seconds until the TV mode key light briefly turns off then stays on, then release the LAST key.
4. Press and release the LAST key to save the setting. The TV mode key light turns off indicating successful setup. The channel commands will now work for different devices.

## D-II. Channel Always Controls your Set Top Box (Factory Default)

1. Press and hold the TV key and while holding it pressed, press the OK key for 1 second.
2. Release both keys, all of the mode keys will flash followed by the TV mode key light remaining on.
3. Press and hold the LAST key for 3 seconds until the TV mode key light briefly turns off then remains on.
4. Press and release the STB mode key. The selected mode key light remains on.
5. Press and release the LAST key to save the setting.

The STB mode key light will turn off indicating a successful initial setup. The channel commands will be setup for your Set Top Box regardless of what mode is selected. If the selected mode key light flashes for 3 seconds and turns off, then you will need to start over from step 1.

## E. Mode Deactivation

If you'd like to deactivate a device mode, then follow the instructions below:

1. Press and hold the mode key to be deactivated (TV, DVD, or AUX) and while holding it pressed, press the OK key for one second.
2. Release both keys, all of the mode keys will flash and then the selected mode key light will remain on.
3. Enter the 4-digit code 1754 by pressing the numerical keys (0-9). The selected mode key light will blink for each digit entry and will remain off after the entry of the fourth digit - indicating the mode is deactivated.

Note the STB mode cannot be deactivated.

## F. Multiple Device Power Control Setup Options

After pressing the STB key, pressing the Power key turns the Set Top Box on or off, AND turns on or off the TV if it has been setup. If you want the Power key to turn on other devices at the same time you can enable these as follows:

1. Press and hold the STB key and while holding it pressed, press the OK key for 1 second. Then release both keys. You are now in setup mode.
2. Press and release the mode key (TV, DVD or AUX) you want to enable.
3. Press and release the 1 key. The selected mode is now enabled. If no mode key is pressed instead 2 ALL modes (TV, DVD and AUX) will be enabled.

To remove a mode from the Power key:

1. Press and hold the STB key and while holding it pressed, press the OK key for 1 second. Then release both keys. You are now in setup mode.
2. Press and release the mode key (TV, DVD or AUX) you want to disable.
3. Press and release the 0 key. The selected mode is now disabled. If no mode key is pressed in step 2, ALL modes (TV, DVD and AUX) will be disabled.

Note you can turn individual devices on/off by pressing the desired Mode key followed by the Power key. It is important to point your remote control directly towards the devices for this feature to operate correctly.

## G. Backlight Cancellation Feature

Your Remote Control has the ability to toggle between turning the backlights on or off. If you wish to use this feature, follow these instructions.

1. Press and hold the TV key and while holding it pressed, press the OK key for one second and release both keys at the same time.
2. All the mode keys flash and the TV mode key light stays on.
3. Press the GUIDE key, all backlights will no longer turn on.

To reverse this process so that the backlights turn on when the remote control is being used, simply follow the same steps of the above section one more time.

## H. Resetting the Remote Control to the Factory Default Settings

1. Press and hold the TV key and while holding it pressed, press the OK key for one second and release both keys at the same time.
2. All the mode keys will flash, the TV mode key light will stay on.
3. Press and hold the DELETE key for 3 seconds until the TV mode key blinks and stays off. The remote control is now reset to factory default settings. If you want to use the remote control for your TV and other devices, you will need to setup the TV, DVD and AUX mode keys.
4. If no key is pressed within 30 seconds, the remote control times out. The selected mode key light flashes for 3 seconds and turns off. The remote control returns to normal operation and you will need to start over.

## I. Troubleshooting Learning

You can only learn one device type under any one mode key. For example, only learn TV codes under the TV mode, DVD codes under the DVD mode, etc. If you are trying to learn from a "Universal" remote, it might have more than one code type stored under a mode.

- a. No functions may be stored under the LEARN key, or in the STB mode.
- b. Depending on the remote you are trying to learn, some keys may not be learnable.
- c. Only one original device type can be learned per individual mode.
- d. Use fresh batteries for your original remote, and your Remote Control.
- e. Keep at least three feet away from incandescent or low-energy lights when learning.
- f. Before learning, clear all learned commands (refer to Section D-II) then try learning 2 or 3 commands initially.
- g. Point your original remote at the bottom end of your Remote Control so the IR elements on both remotes are directly in line with each other (see diagram to the left). You may need to adjust the height of either remote to achieve this.
- h. Avoid learning your original remote's Volume/Mute keys unless you are sure these operate the same device.

- i. Avoid learning your original remote's VCR or DVD transport keys unless you are sure these operate the same device.
- j. If learning the first or second keys for a mode results in continuous errors then try the following:
  - i. End the learn session by pressing the LEARN key.
  - ii. Clear out the learned commands for that mode.
  - iii. Check the IR elements are correctly aligned between the two remotes.
  - iv. Adjust the distance between the two remotes to be closer (e.g. half an inch) or further away (e.g. 2 inches) from each other.
  - v. Try learning the original remote for that mode again. If problems reoccur with the same key check the original remote key being learned ?does it transmit? Does it operate the target device? Try learning that key under a different *clear* mode. If it learns OK then it is likely to be a different code type from the others and cannot be learned under the same mode.

# TV including LCD, Plasma, and Panel

**Save Code list for future use.** Refer to the setup procedure below and look up the 4 digit code for your brand of TV, DVD, etc., from the list below. Refer to your REMOTE User's Manual for more information.

ABEX .....0185  
ACER .....1163  
ACME .....0016  
ADA .....0006  
ADC .....0001 0010  
ADMIRAL .....0135 0020 0226 0001  
ADVENT .....1171 0116 0167 0176 0922  
ADVENTURA .....0174  
AIKO .....0058  
AIWA .....0195 0196 0227 0269  
AKAI .....0105 0002 0077 1137  
.....1138 1105 1113 1139  
ALLERON .....0051  
AMARK .....0020  
AMTRON .....0053  
ANAM NATIONAL .....0053 0003  
.....0025 0042 0193  
AOC .....0004 0005 0009 1009  
.....0014 0156 0175 0187  
APEX .....0214 0216 0215 1132 0401  
ARCHER .....0020  
ASPECT .....0059  
AUDIOVOX .....1164 1165  
.....0053 1019 1117  
AXION .....0177  
BANG & OULFSEN .....0190  
BELCOR .....0004  
BELL & HOWELL .....0031 0049  
.....0000 0001  
BENQ .....0081 0083 0110 1150  
BLUESKY .....1155 0144  
BRADFORD .....0053  
BROKSONIC .....0147 0135  
.....0310 0394 0932  
BROKWOOD .....0004  
CANDLE .....0004 0009 0174 0008  
CAPEHART .....0075  
CCE .....1153  
CELEBRITY .....0002  
CELERA .....0214  
CENTRIOS .....0169  
CENTURION .....0009  
CETRONIC .....0042  
CHANGHONG .....0214 0401  
CINERAL .....0058 0144  
CITIZEN .....0004 0009 0053 0105 0109  
.....0189 0135 0001 0008 0042 0058  
CLAIRTONE .....0014  
CLASSIC .....0214 0401 0042  
COBY .....1091 1124  
COLOR VOICE .....0010  
COLORTYME .....0004 0009 0010  
CONCERTO .....0004 0009  
CONCIERGE .....0121  
CONTEC .....0053 0012 0014 0042  
CORNEA .....0050  
CRAIG .....0053 0042  
CROSLEY .....0062  
CROWN .....0053 0042  
CTX .....0020

CURTIS MATHERS .....0031 0105 0130	HYUNDAI .....1134	MITSUBISHI .....0005 0151 0051 0004	RADIO SHACK ..0031 0004 0048 0049	TEKNIKA .....0031 0004 0005 0009	COLORTYME .....0234	MARTA .....0245	SANSUI .....0310 0376 0377	CASIO .....0777
.....0004 0009 0000 0049	ILO .....0198 1070 1024 1023	.....0009 0022 0141 0180	.....0053 0170 0009 0227 0342	.....0051 0053 0105 0109 0170	COLT .....0356	.....0292	.....0394 0256 0967 0303	CENTRIOS .....0783
CXC .....0053 0042	IMA .....0053	MONIVISION .....0036	.....0000 0012 0041 0042 0095	.....0000 0174 0001 0008 0012 0042	CRAIG .....0245 0354 0356 0248	.....0896	.....0232 0304 0267	CITIZEN .....0826
CYBERVISION .....0144	IN FOCUS .....0000	MONTGOMERY WARD .....0031	RCA .....0031 0004 0048 0054 0094 0100	TELECAPTION .....0117	CURTIS MATHERS .....0225 0287 0227	.....0292	.....0268 0354 0248 0416	CURTIS MATHERS .....0777
DAEWOO .....0130 0004 0009 0100 0005	INFINITY .....0062 0288	MOTEVA .....0049 1013	.....0001 0000	TELERENT .....0031 0000 0001	.....0334 0354 0358 0234 0249 0292	MEMOREX .....0287 0245 0268	.....0240 0250 0257	DENON .....0670
.....0138 0043 0140 0039 0444 0080 0042	INITIAL .....1070 0146 1085 1109	MOTOROLA .....0020 0003	.....0102 0107 0129 0191 0005 0009 0000	TERA .....0004 0186	CYBERNEX .....0354	.....0304 0310 0329 0354 0226	.....0290 0341 0237 0263	EMERSON .....0661 0673
ACME .....0016	.....0058 0017 0010 0126 0018 0107 0019	INSIGNIA .....1181 1180 1175 1171	MTG .....0004 0005 0009 0105 0109 0014	TEVION .....0198	DAEWO .....0279 0240 0250 0252	.....0227 0337 0248 0251 0292	.....0363 0245 0268 0287	FISHER .....0667 0675 0676 0677 0718
ADA .....0006	DAYTRON .....0004 0009	MULTITECH .....0053	.....0103 0189 0217 0135 0133 0116 0167	REALISTIC .....0031 0004 0048 0049 0094 0100	TMK .....0004 0009	.....034 0242 0244 0251 0971	.....0369 0394 0456 0248	GENEXXA .....0673 0678 0719
ADC .....0001 0010	DELL .....0209 0028 0132	MULTIVISION .....0084	.....1148 0456 0029 0905 1406 1407 1408	.....0053 0170 0009 0000	TOSHIBA .....0159 0178 0109 0120 0181	DBX .....0376 0377 0234	.....0273 0274 0292 0332 0343	GOLDSTAR .....0720
ADMIRAL .....0135 0020 0226 0001	DIAMOND VISION .....0210 0948	INTEGRA .....0181	.....0394 0294 0012 0095 0117 0141	.....0105 0049 0095 0170 0260 0358	DENON .....0305	.....0456 0226 0226 0227	SHARP .....0460 0361 0226 0227	HARMAN KARDON .....0680 0691
ADVENT .....1171 0116 0167 0176 0922	INTEQ .....0092 0896	INTEGA .....0181	.....0394 0294 0012 0095 0117 0141	MYRON & DAVIS .....0212	RHAPSODY .....0014	.....0369 0393 0456 0248	.....0266 0242 0254 0300	HITACHI .....0678
ADVENTURA .....0174	JANEIL .....0174	NAD .....0004 0009 0109 0185	.....0121 0181 0111	RUNCO .....0121 0181 0111	DIMENSIA .....0225	.....0290 0298 0369	.....0229 0353 0369 0356 0357	INKEL .....0681
AIKO .....0058	JBL .....0062	NEC .....1384 0181 0004 0005	.....0174	SAMPO .....0124 0046 0004	DURABRAND .....0245 0405	.....0376 0377 0295 0254	.....0354	IN SIGNIA .....0769
AIWA .....0195 0196 0227 0269	JC PENNEY .....0031 0004 0005 0009	VENTURER .....1183	.....0009 0003 0010 0095 0141	SAMSUNG .....0105 0077 0076 0109	DYNATECH .....0227 0251	.....0227 0337 0287 0343	.....0369 0394 0456 0248	CENTRIOS .....0783
AKAI .....0105 0002 0077 1137	DIMENSY .....0031 0000	NET TV .....0046 0124	.....0105 0107 0109 0054 0000 0087	VICTOR .....0060	ELECTROHOME .....0245 0254	.....0273 0274 0292 0332 0343	.....0673 0678 0719	CITIZEN .....0826
.....1138 1105 1113 1139	DISNEY .....0158 0135	NEXTTECH .....1052 0167	.....0008 0012 0015 0022 0030 0052	VIDEOCON .....1166	ELECTROPHONIC .....0245	.....0373 0242 0293 0333 0343	.....0680 0691	EMERSON .....0661 0673
ALLERON .....0051	KIWI .....0042	NIKEI .....0042	.....0094 0238 0012 0015 0080 0104 0106	VIDTECH .....0004 0005 0009	MULTITECH .....0227 0354	.....0389 0364 0365 0366 0380	.....0727 0728 0828	FISHER .....0661 0673
AMARK .....0020	DUKANE .....0059 0072	NIKKO .....0004 0009 0058	.....0009 0009 0005 0009	SAMSUX .....0009	.....0257 0290 0310 0325 0354 0240 0233	.....0251 0278 0356	.....0369 0292 0332	KRELL .....0666
AMTRON .....0053	DUMONT .....0121 0004	JENSEN .....0004 0009 0133	.....0174	SAMTRON .....0105	DURABRAND .....0245 0405	.....0268 0376 0377 0289	.....0456	KYOCERA .....0888
ANAM NATIONAL .....0053 0003	DURABRAND .....0133 0189 0135	NIKO .....1143	.....0216 0043 0056	SANSUI .....0135 0310 0394	.....0231 0237 0249 0251 0254 0259 0262	.....0899 0227 0287 0290	.....0686 0687 0729 0738	LUXMAN .....0686
.....0025 0042 0193	.....0153 0217 0157 1135	NORENCE .....0058	.....0247 0923 0012 0065 0067 0141	SANTECA .....0194	ELECTROHOME .....0245 0254	.....0226 0292 0326 0458 0106	.....0682 0813	MOTOROLA .....0226 0292
AOC .....0004 0005 0009 1009	DYNASTY .....0042	KAWASAKI .....0945	.....0105 0107 0109 0054 0000 0087	SANYO .....0049 0097 0110 0004	ELECTROPHONIC .....0245	.....0379 0324 0229 0323 0353	.....0679 0683 0685	SONY .....0679 0683 0685
.....0014 0156 0175 0187	DYNEX .....1181 1171 0135	KAWASHO .....0004 0009 0002	.....0175	OLEMIA .....1027 1012 1140 1142 1156	VIZIO .....1000 0143 1222 1168 0112	.....0373 0248 0273 0274 0416	.....0727 0728 0828	MARANTZ .....0666 0688 0689 0732
APEX .....0214 0216 0215 1132 0401	ELECTROBAND .....0002 0014	KAYPANI .....0175	.....0216 0043 0056	ONCOMMAND .....0201 1161	Wards .....0031 0062 0004 0005	.....0234 0248 0273 0274 0416	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
ARCHER .....0020	ELECTROHOME .....0004 0009	KEC .....0042 0053	.....0042	OPTIK .....0170 0186 0374 0381	SCEPTRE .....1167 1132 0149	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
ASPECT .....0059	ELEKTRA .....0001	KENWOOD .....0214	.....0214	SCOTT .....1170 0186 0374 0381	SCOTCH .....0004 0009	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
AUDIOVOX .....1164 1165	ELEMENT .....1025 1173	KLOSS NOVABEAM .....0068 0174	.....0174	SEOPTICA .....0020 0095	SCOTT .....1139 0004 0009 0051	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
.....0053 1019 1117	ELITE .....1025 1173	KLH .....0214	.....0214	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
AXION .....0177	ELITE VIDEO .....0197	KOGI .....1005	.....1005	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BANG & OULFSEN .....0190	EMERSON .....1172 0004 0009 0044	KONKA .....0053 0011 0016 0047	.....0047	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BELCOR .....0004	EMERSON .....0135 0049 0051 0019 0044	KONKA .....0053 0011 0016 0047	.....0047	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BELL & HOWELL .....0031 0049	EMERSON .....0039 0130 0210 0227 0233 0265	KRTV .....0053 0014 0021 0042 0070	.....0047	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
.....0000 0001	EMERSON .....0266 0310 0325 0456 0040 0041	KURAZAI .....0001	.....0001	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BENQ .....0081 0083 0110 1150	EMERSON .....0042 0021 0023 0024 0179 0045	LASONIC .....0210 0948	.....0210 0948	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BLUESKY .....1155 0144	EMERSON .....0042 0025 0027 0030 0032 0034 0037	LEGEND .....0116	.....0116	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BRADFORD .....0053	ENVISION .....1179 0004 0009 0074 1009	LG .....0134 0004 0050 0009 0005 0155	.....0155	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BROKSONIC .....0147 0135	ENVISION .....1179 0004 0009 0074 1009	MAXENT .....0189	.....0189	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
.....0000 0001	ENVISION .....1179 0004 0009 0074 1009	ESA .....0189	.....0189	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BROKSONIC .....0147 0135	ENVISION .....1179 0004 0009 0074 1009	ESPA .....0189	.....0189	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BROKSONIC .....0147 0135	ENVISION .....1179 0004 0009 0074 1009	EXPAND .....0189	.....0189	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BROKSONIC .....0147 0135	ENVISION .....1179 0004 0009 0074 1009	EXPAND .....0189	.....0189	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BROKSONIC .....0147 0135	ENVISION .....1179 0004 0009 0074 1009	EXPAND .....0189	.....0189	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 0456	.....0227 0265 0266 0268 0269 0458 0456	MARANTZ .....0666 0688 0689 0732
BROKSONIC .....0147 0135	ENVISION .....1179 0004 0009 0074 1009	EXPAND .....0189	.....0189	SEOPTICA .....0020 0095	SEOPTICA .....0053 0192 0052 0001 0008 0024	.....0227 0265 0266 0268 0269 0458 04		

**CD, cont.**

SIRIUS	0746 0684	NOVAPLEX	0528	CENTURY	0547	SAMSUNG	0594 0583 0613	CLASSIC	0431 1051 0401	KOSS	0415 0388	SAMSUNG	1389 1388 1387 0407	ECHOSTAR	.0655 0647	JVC	.0964						
SKYFI	0725	NOWTV	1045	CHANNEL MASTER	0577 0578 0579		0616 0619 0540	CODY	0926 0946 0947 0916 0445	KXD	.0894		0454 0942 0963 0891 1099 0455	EMTEC	.1385 1386	KLH	.0906						
SONY	0753 0323 0778 0779	NSC	0487	CHAPPARAL	0560 0561	SHARP	.0604		0928 0894 1091 1101 1111 1112 1124	LASONIC	.1410 0451 0948	SAMPO	.0417	EXPRESSVU	.0647 0655	KOSS	.0415						
TEAC	0676 0689 0699			OAK	0476 0489	CHEYENNE	.0561	SIERRA I II III	.0561	CONCEPT	.0430	LENOX	.0931 0435 1087 1088	FORTEC STAR	.0569 0555 0556	LENOXX	.0931						
TECHNICS	0709 0710 0711 0856			PACE	0532	COOLSAT	1036 0546	SKY NETWORK	0542 0541 0614	CONIA	.0445	LG	.1404 1400 0405 0972 0907	HUGHES	.0580								
THETA DIGITAL	0716 0733 0820 0862			PANASONIC	0460 0508	DIGIWAV	1034		0615 0646 0537 0538 0539	CONTEL	.1401	LINN	.0443	SEARS	.0394 0456	HUGHES NETWORK	.0621 0580	MAGNAVOX	.0915				
TOSHIBA	0721	TAO	0725	PARAGON	0486	DIRECTV	.1049 1766 1767 1768 0622	TEAC	0710 0807 0855 0856 0857	CRITERION	.0448	LITEON	.0982 0902 0898 0959 1069	HUMAX	.0912		[0969 & 0756] [0408 & 0756]						
VICTOR	0682	TECHNICS	0791 0810 0815	PHILIPS	0471 0479 0485	STAR SIGHT	.0633	TECHNICS	0913 0914 0915 0916 0917	CURTIS INTERNATIONAL	.0929	LIQUIDVIDEO	.0921	SELECTRON	.1077 1078 1079	ILLICO	.0506	MYRON & DAVIS	.0962				
YAMAHA	0665 0712 0713 0724 0846	TEVION	0484		0490 0491 0492	STAR TRAK	.0608		0630 0634 0636 0638 0641 0652 0653	MAGNAVOX	.1409 0398 0408 0458		1080 1081 1082 1083	NESA	.0962								
ZENITH	0676 0730 0759 0784 0850	VENTURER	0745	PIONEER	0494 0478 0506 0493	STARCHOICE	.0640 0645 0627	DISH NETWORK	.0628 0655 (A)	CYBERHOME	.1053 0393 0985 0939	SEMP	.0388			EXPRESSVU	.0647 0655	KOSS	.0415				
Audio		VIZIO	0660 0883	PULSAR	0486	0647 (B)	0612 0654 0588 0589 0590	SUPER GUIDE	.0609	CYBERVISION	.1391	MARANTZ	.0398 0405					LENOXX	.0931				
XM RADIO	0708 0725	WONDER	0762	QUASAR	0486	DISHPRO	.0588 0589 0590 0654	CYTRON	.0446 0388	CRITERION	.0448	LITEON	.1403 0397 0897 0908	HUGHES	.0580			MAGNAVOX	.0915				
AJWA	0839 0842 0851 0860	RADIO SHACK	.0517 0505 0534 0525	SYLVANIA	.0581	DAEWOO	.0440 0441 0444 0971 0965	DAEWOO	.0923 0903	MAXENT		SHERWOOD	.0425	MEDION	.0959			ONKYO	.0975				
APEX	0436	RCA	0460 0471 0507	DX ANTENNA	.0568 0582	TELSTAR	.0547	TECHNICS	0911 0446 0903 0896 0959	MEDION	.0911 0446 0903 0896 0959	SHINCO		MOTOROLA	.0533			PANASONIC	.0974				
APPLE iPOD	0885	RCN	0529	ECHOSPHERE	.0628	UNIDEN	.0633 0573 0611	UNIDEN	.0911 0446 0903 0896 0959	SHINSONIC	.0943	SONIC BLUE	.0937	PANASONIC	.0373 0387			PHILIPS	.0755 1126 [0969 & 0756]				
BOSE	0672 0774 0775	REALISTIC	0469	ECHOSTAR	.0628 0655 (A) 0647 (B)	ROGERS	.0512	ROGERS	.0911 0446 0903 0896 0959	SONIC BLUE	.0937	SONY	.1396 0987 0988	PIONEER	[0966 & 0756] [0408 & 0757]								
CARVER	0825	REGAL	0482	REGAL	.0612 0654 0588 0589 0590	RUNCO	.0557 0558 0559	RUNCO	.0911 0446 0903 0896 0959	SHINSONIC	.0943	SONY	.1396 0987 0988	RADIO SHACK	.0449 0919 0920								
CENTRIOS	0762 0763	REMBRANDT	0463	EXPRESSVU	.0654 0647 0655 0628	SPRUCER	.0486	SPRUCER	.0911 0446 0903 0896 0959	SONY	.0943	TECHNICS	.0400										
CITIZEN	0764 1055 0854	ABC	.0461 0463 0464 0465 0466	SCIENTIFIC ATLANTA	.0512 0498	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
CRITERION	0448	ADIELPHIA	.0512 0511	GE	.1769 1032 0636 0649 0637	DUAL	.0447 0984 0956	DUAL	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
DELPHI	0708	ALLEGRO	.0524 0525	AMERICAST	.0527	GEVIDEO	.0506 0535 0466 0496	GEVIDEO	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
DENON	0803 0817 0852	SHAW	.0511	ANTRONIX	.0468 0469	GO VIDEO	.0610	GO VIDEO	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
DURABRAND	0776	SIGNAL	.0474	GENERAL INSTRUMENT (GI)	.0627 (A) 0642 (B) 0643 (C) 0644 (D)	HUGHES	.0612 0641 0607	HUGHES	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
FISHER	0814 0821	ARCHER	.0468 0470 0471	SIGNATURE	.0463	HUGHES NETWORK	.0621 0641	HUGHES NETWORK	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
GOLDSTAR	0766	AT&T	.1753 0511	STAR SIGHT	.0507	DRIVE	.0597	DRIVE	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
HARMAN KARDON	0804 0918	BELL	.1755	STAR TRAK	.0516	MITSUBISHI	.0553 1047	MITSUBISHI	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
INSIGNIA	1066	BLUETOOTH	.0527	STARTRAK	.0516	UNITECH	.0553 1047	UNITECH	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
iPOD	0884	AT&T	.1755	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
JVC	0790 0813 0819	BELL	.1755	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
KENWOOD	0881 0683 0808	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
KODA	0816 0828 0832 0869	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
KOSS	0415	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
MAGNAVOX	0796 0814 0915 0756	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
MARANTZ	0688 0824	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
MITSUBISHI	0877	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
NAD	0721 0739 0743	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
NELSON	0854	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
NEO	0725	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
NEXXTECH	1066 1055 0780 0782	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
NORCENT	0788 0789 0829 0854 0861	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
ONKYO	0805 0811 0812 0975	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
OPTIMUS	0667 0747 0748 0749	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
PIONEER	0754 0752 0751 0880	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
REVIQUEST	0751 0752 0754 0793	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
PANASONIC	0791 0810 0815 0823	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
PHILIPS	0863 0864 0974 0950	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
PHILIPS	0755 0814 0823	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
PIONEER	0754 0752 0751 0880	STARCRAFT	.0516	STARCRAFT	.0516	VIDEO CIPHER II	.0574	VIDEO CIPHER II	.0911 0446 0903 0896 0959	SHINSONIC	.0943	TECHNICS	.0400										
REALISTIC	0754 0752 0751 0880	STARCRAFT	.0516	STARCRAFT	.051																		