

HUAYU[®]

RM-B786

characteristic/Setting Instruction

RM-B786 USE FOR STAR SAT. Please use this product on a trial basis immediately after installing the batteries for the first time. If every function works properly, enjoy your use without doing any Settings; otherwise, you have to employ the following method to do some settings. No need to do settings on the chips: SR-X3200CU/3500 CUCI/4000D/7100CU/X7300CU, SR-5100D, X-9500, STAR SAT 190, Model select.

Press the "POWER" key and "NUMBER" key at the same time, after that release them. The setting is complete.

Automatic searching

Hold the "POWER" key (about 6 seconds). The remote controller enters automatic searching mode. When the volume symbol is displayed; release "POWER" key to save and exit.

POWER+0

