 



RM-L1130+X Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV.

Introduction: RM-L1130+X is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

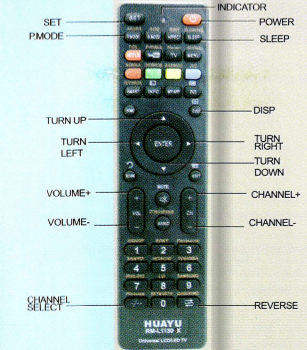

 Battery Installation: In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rationed), which is shown in the



Battery Description: The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.

Please do not put old and new batteries or different types of batteries together. In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries. Put it better remove the batteries

Methods for setting remote controller: This remote controller has the following methods for setup, you can choose any of them.

A. Inputting code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, the remote controller will be in the state of inputting code.

3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.

B. Manually searching for the code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote

controller will be in the state of Manually searching for the code. 3, Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4, Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

C. Automatically searching code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

D. Point to Point Brand Searching:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY = "0"

2, Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote

С. Модели с функцией автоматического поиска: 1. Включите телевизор и направьте на него пульт. 2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнёт мигать. Пульт активизировал функцию автоматического поиска. Внимательно смотрите на экран телевизора, не отпуская кнопку "SET". Введите три первых цифры кода, соответствующего модели телевизора.

3. Введите три первых цифры кода, соответствующего модели телевизора. После ввода кода индикатор перестанет гореть, установка завершена.

4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

B. La búsqueda manual del código

1. Encender el televisor, apunte el control remoto hacia el televisor. 2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código.

3. pulse el botón de volumen + una vez y luego suéltelo, ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce tal símbolo, repita el procedimiento.

D. Mode de búsqueda de punto a punto

1. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0.

2. pulsada botón de símbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien, si no, repita el procedimiento.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de

función (excepto el ajuste(SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

2. Presione y mantenga el botón de ajuste(SET) durante unos 6 segundos hasta la luz indicador se enciende. Ver si el símbolo de volumen aparece en la pantalla, si es así, suelte de inmediato el botón SET para detener la búsqueda automática.

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado. si no, repita los pasos 2 hasta que encuentre el código adecuado.

D. Mode de búsqueda de punto a punto

1. Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0.

2. pulsada botón de símbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien, si no, repita el procedimiento.

E.Restaurar los ajustes de fábrica. Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

Warm Tips: If you have any problems when you set or use this remote controller, please try to do as follow: 1. When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.

2. If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.


3. when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters: Remote Controlling Distance: About 8 meters (varies by different types) Battery Type: two pieces of AAA Batteries After-sales Service: If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

 
 
To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product. The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

Grid of 48 remote controllers with brand names and codes: 000 AOC, 002 GENERAL LCD-831, 003 GENERAL LCD-832, 004 IZUMI TL19H405B, 005 IZUMI 0152, 006 EN 30303D, 010 HOB301 MYSTERY KT6957 6857, 011 AKIRA TC1860F1, 012 HOB187 GK23J6-C15, 013 HOB279 AKIRA LCT-15CHST, 014 4-3-2010-002, 015 BBK, 016 BBK EN-31603B, 017 HOB158 BBK LT1504, 018 HOB332 BBK CAMERON, 019 HOB380 RC2465, 020 HOB387 RC-2603, 021 HVD208 BBK, 022 HVD209 RC1529, 023 HOB228 LCD 831, 024 HOB283 SUPRA 46275TV-LC1504, 025 HOB302 HYUNDAI 1587 RCF1B, 026 HOB303 SUPRA306 STV-LC1515, 027 HOB327 Supra RC3b, 028 HOB328 Supra RCF3b, 029 HOB409 SUPRA Y-72C2, 030 HOB410 SUPRA RC6b, 031 HOB411 SUPRA RC12, 032 RCF1B RCF1B, 033 SUPRA BD-212, 034 SUPRA HOF12H126 GPD11, 035 SUPRA RC1b, 036 SUPRA RC5b, 037 SUPRA RC5db, 038 SUPRA RC13b, 039 SUPRA RC-118-0B, 040 SUPRA STV-LC2615ED, 041 HOB168 SHIVAKI BT0451C, 042 HOB231 SHIVAKI 02, 043 ROLSEN ER-31607R



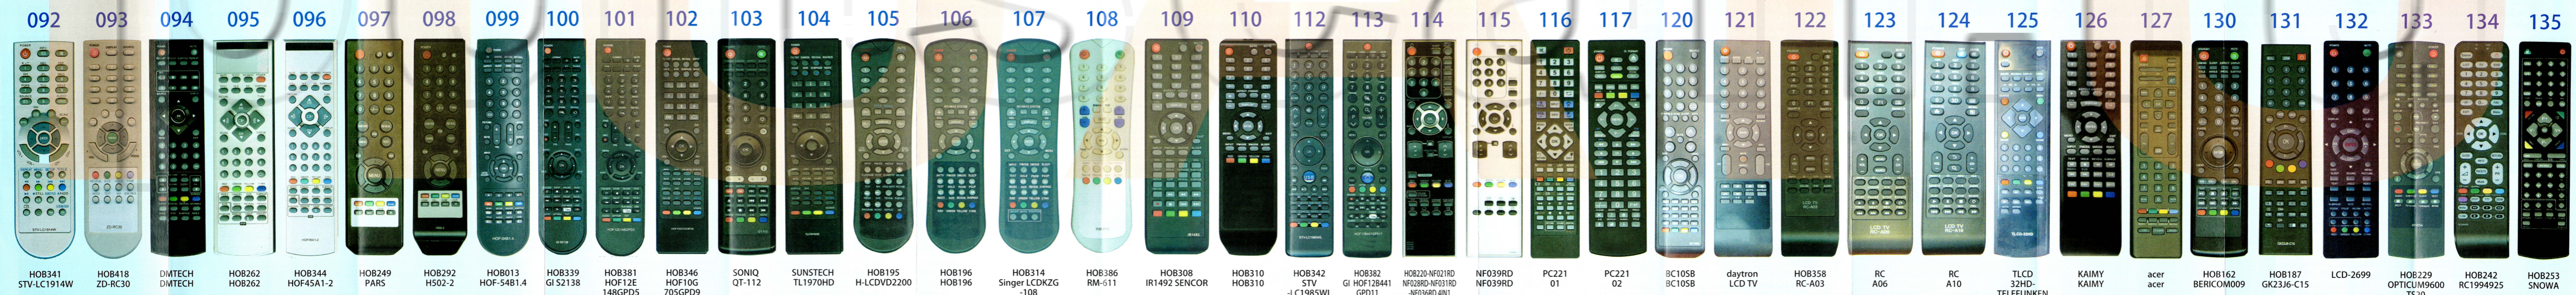



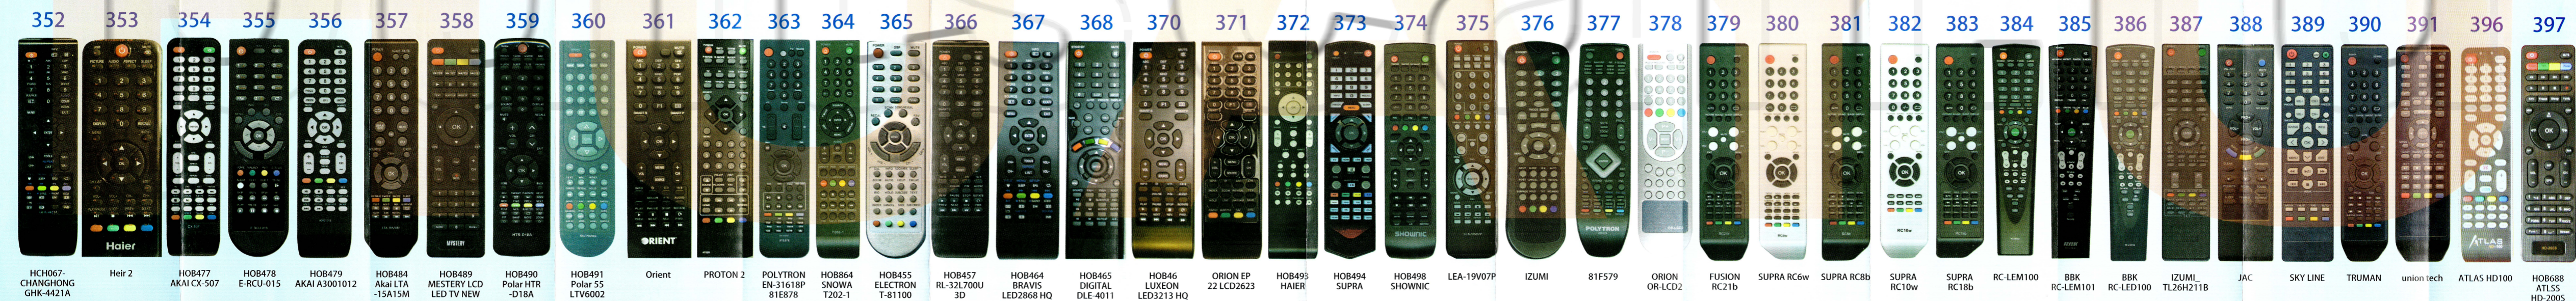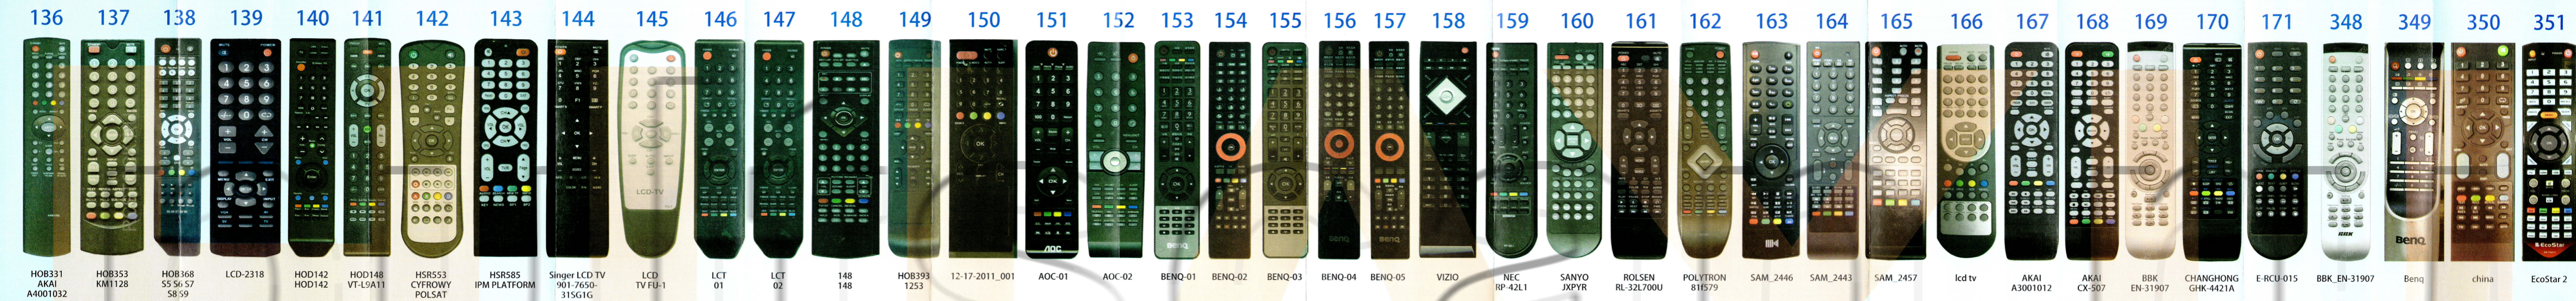

HOB331 AKAI A4001032  
 HOB353 KM1128  
 HOB368 55 S6 S7 S8 S9  
 LCD-2318  
 HOD142 HOD142  
 HOD148 VT-L9A11  
 HSR553 CYFROWY POLSAT  
 HSR585 IPM PLATFORM  
 Singer LCD TV 901-7650-315G1G  
 LCD TV FU-1  
 LCT 01  
 LCT 02  
 148 148  
 HOB393 1253  
 12-17-2011\_001  
 AOC-01  
 AOC-02  
 BENQ-01  
 BENQ-02  
 BENQ-03  
 BENQ-04  
 BENQ-05  
 VIZIO  
 NEC RP-42L1  
 SANYO JXPYR  
 ROLSEN RL-32L700U  
 POLYTRON 81F579  
 SAM\_2446  
 SAM\_2443  
 SAM\_2457  
 lcd tv  
 AKAI A3001012  
 AKAI CX-507  
 BBK EN-31907  
 CHANGHONG GHK-4421A  
 E-RCU-015  
 BBK\_EN-31907  
 Benq  
 china  
 EcoStar 2  
 HCH067-CHANGHONG GHK-4421A  
 Heir 2  
 HOB477 AKAI CX-507  
 HOB478 E-RCU-015  
 HOB479 AKAI A3001012  
 HOB484 Akai LTA-15A15M  
 HOB489 MESTERY LCD LED TV NEW  
 HOB490 Polar HTR-D18A  
 HOB491 Polar 55 LTV6002  
 Orient  
 PROTON 2  
 POLYTRON EN-31618P 81E878  
 HOB864 SNOWA T202-1  
 HOB455 ELECTRON T-81100  
 HOB457 RL-32L700U 3D  
 HOB464 BRAVIS LED2868 HQ  
 HOB465 DIGITAL DLE-4011  
 HOB46 LUXEON LED3213 HQ  
 ORION EP 22 LCD2623  
 HOB493 HAIER  
 HOB494 SUPRA  
 HOB498 SHOWNIC  
 LEA-19V07P  
 IZUMI  
 81F579  
 ORION OR-LCD2  
 FUSION RC21b  
 SUPRA RC6w  
 SUPRA RC8b  
 SUPRA RC10w  
 SUPRA RC18b  
 RC-LEM100  
 BBK RC-LEM101  
 BBK RC-LED100  
 IZUMI\_TL26H211B  
 JAC  
 SKY LINE  
 TRUMAN  
 union tech  
 ATLAS HD100  
 HOB688 ATLS HD-200S



