

RM-L1376M

Setting with Code:

- 1: If TV brand is not confirm, please find the code form the color instructions paper.
- 2: Press "SET" + "POWER", light is on,
- 3: Press three code **, light off, setting finish.

000	001	002	003	004	005	006	007	008	009	010	011	012	013	014	015	016	017	018	019	020											
AOC AOC	CH-3423 CH-3423	GENERAL LCD-831	GENERAL LCD-832	ZUMI TL19H405B	ZUMI 0152	EN 30303D	HO T728 AK TO-03	HO T867 AK TO-05	HSW 009 AK-2133	HOB301 MISTERY 87957655AK RA TC 1860F1G	HOB117 K23J6-C 15 AKRA LCT-15CRST	HOB187	HOB279	HOB210-002	BBK BBK	BBK EN-31603B	HOB158 BBK LT1504	HOB332 BBK CAMERON	HOB380 RC 2465	HOB387 RC 2603											
021	022	023	024	025	026	027	028	029	030	031	032	033	034	035	036	037	038	039	040	041	042	043	044	045	046	047					
HVD 208 BBK	HVD 209 RC1529	HOB228 LCD 831	HOB283 SUPRA HD25TV-LC1504	HOB302 HYUNDAI 1587RCFB	HOB303 SUPRA 306STV-LC1515	HOB327 Supra RC16	HOB328 Supra RCF36	HOB409 SUPRA Y-72C2	HOB410 SUPRA RC6b	HOB411 SUPRA RC12	RCF1B RCF1B	SUPRA BD-212	SUPRA HOF12H1266PD11	SUPRA RC16	SUPRA RC5b	SUPRA RC5db	SUPRA RC13b	SUPRA RC-118-0B	SUPRA STV-LC2615E	HOB168 SHAWAIBTO45IC	HOB231 SHAWAIB102ER	RO LSEN 31607R	HOB389 CH-2012	HOB391 CH-4911	HIC056 RC1994907-01	HTC058 RC198					
048	049	050	051	052	053	054	055	056	057	058	059	060	061	062	063	064	065	066	067	068	069	070	071	072	073	074	075				
HOB333 81E829	HOB394 81E503	HOB227 ORION	HOB252 OPENBOX-1253	HOB281 MYSTERY 5195M	HOB282 MYSTERY 8151	HOB301 MYSTERY KT0957	HOB326 RC16	MESTERY LCD LED TV NEW	HSR 499 HWJON	HOB402 STAR	HOB403 STAR	HOB405 STAR	ER-31607 ER-31607K-1098F	HOB438	LCD-2277KC	LCD-1699RC	LCD-15ARC	HOB202 HYUNDAI 1587RCFB	HOB276 RC16	HOB390 CH-2145	FUSION RC3b_1042	HOB198 FUNA148K	R1628 FUNA148K	HOB423 CH-3259	HOB418 ELNBERG	HOB454 ELNBERG	HOB471 ELNBERG				
076	077	078	079	080	081	082	083	084	085	086	087	088	089	090	091	092	093	094	095	096	097	098	099	100	101	102	103				
HOB122 CH-800	HOB123 CH-900	HOB129 CH-3700	HOB151 BERKOM 008	HOB189 HOB189	HOB264 RC-A3-01	HOB273	HOB373 EN-21662B	HOB223 RC-L-05	HOB225 RC-L-06	HOB108 ACH-P-2	HOB149 BERKOM 006	HOB150 BERKOM 007EL-4	HOB206 HUA299	HOB329 T15E01MT	HOB330 H-LCD32V6TV-LC1914W	HOB341 ZD-RC30	HOB418 DMTECH	DMTECH	HOB262 HOB262	HOB341 HOF41A1-2	HOB249 PARIS	HOB292 H502-2	HOB013 HOF-54B L4	HOB339 G152138	HOB381 HOF12E1486PD5	HOB316 HOF1067056PD9	SONIQ QT-112				
104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133		
SUNSTECH TL1970HDH-LCDV2200	HOB195	HOB196 HOB196	HOB314	HOB386	HOB308 R1492	HOB310 SENCOR	HOB310	HOB404 CH CH-4870	HOB342 STV-LC1985W L	HOB382 G1HOF12E1486PD11	HOB382 HOF12E1486PD11	HOB382 HOF12E1486PD11	NF039RD NF039RD	PC221 01	PC221 02	PC221 03	119 119	BC105B BC105B	dayton LCD TV	HOB358 RC-A03	RC A06	RC A10	TLCD 32HD-TELEFUNKEN	KAMY KAMY	acer acer	HOB128 CH-1500	HOB132 CH-3200	HOB162 BERKOM 009G	HOB187 K23J6-C15	LCD-2699	HOB229 OPTICUM 9600 TS20

