


Instruction For Universal LCD/LED TV Remote Controller

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup, if it could not work well, it should be set with the following methods before controlling your TV. This remote controller would no less its memory when you change batteries, no need to reset.

Introduction:

CRC 707V is the newest universal LCD/LED TV remote control. Without setup, it's defaulted work for SAMSUNG, SONY, LG directly. Comprehensive care at different levels need, it can also set for different brand or model of TV. Finish setting in 30s. It is the best choice for your remote controller is lose or damaged, it will bring more convenient for your life.

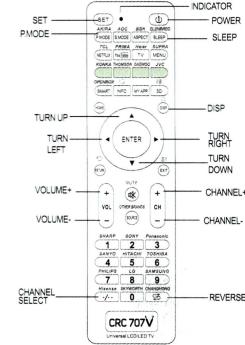

Battery Installation

In accordance with the "+ -" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rechargeable), which is shown in the figure.



Battery Description

 
The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
● Please do not put old and new batteries or different types of batteries together.
● In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
● You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller:


This remote controller has the following methods for setup, you can choose any of them.

A. Inputting code:


1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.



 
2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.



 3. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off., setting to be finished. If the code is more than one set, please use first one at first.




 4. Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



B. Manually searching for the code:

 
1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.




2. Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.



 3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.




 4. Till the volume symbol appears on your TV, test other function buttons(except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.




C. Automatically searching code:

 
1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



 2. Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state,



 please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.



D. Point to Point Brand Searching:


1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTHY = "0"



Brand symbol table


P MODE	E MODE	ASPECT	SLEEP	MENU	SOURCE	1	2	3	4	5	6	7
AKIRA	ACC	BBK	ELBEB	SUPRA	SHARP	SONY	Panasonic	SANYO	HITACHI	TOSHIBA	PHILIPS	
8	9	JVC	0	SYS	GUIDE	TV	RED	GREEN	YELLOW	BLUE		
LG	SAMSUNG	Haier	SKYWORTHY	PHILIPS	TCL	PRIMA	Haier	KONKA	DEEPO	JVC		

 2. Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.



E. Restore factory Settings

 
Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings




Русский

A.Поиск нужной марки телевизора с помощью ввода кода вручную

 
1. Включите телевизор и в первичные коды найдите тот, который соответствует марке Вашего телевизора.



 
2. Одновременно нажмите кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.



 3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода индикатор перестанет гореть, установка завершена




 4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.



В. Способ ручного поиска кода:

 1. Включите телевизор и направьте на него пульт.




2. Одновременно нажмите кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Тогда релик, на этот раз в состоянии ручного поиска.

3. Нажмите кнопку "громкость+", затем освободите её, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.




 4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальны, нажмите кнопку "настройки", индикатор настройки гасит, настройка выполнена.




С.Модели с функцией автоматического поиска

 
1. Включите телевизор и направьте на него пульт.



 2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнет мигать.



 Пульт активизировал функцию автоматического поиска. Внимательно смотрите на экран телевизора, не отпуская кнопку "SET". Введите три первых цифры кода, соответствующего модели телевизора.



D.


1. Найдите код, соответствующий модели вашего телевизора. Например, для SKYWORTHY = "0". Включите телевизор и направьте на него пульт.




Справительная таблица символов марки

P MODE	E MODE	ASPECT	SLEEP	MENU	SOURCE	1	2	3	4	5	6	7
AKIRA	ACC	BBK	ELBEB	SUPRA	SHARP	SONY	Panasonic	SANYO	HITACHI	TOSHIBA	PHILIPS	
8	9	JVC	0	SYS	GUIDE	TV	RED	GREEN	YELLOW	BLUE		
LG	SAMSUNG	Haier	SKYWORTHY	PHILIPS	TCL	PRIMA	Haier	KONKA	DEEPO	JVC		

 
2. Удерживайте нажатой кнопку кода, пока не загорится индикаторная лампочка (около 3 секунд). Не отпускайте кнопку.



 и индикаторная лампочка начнет мигать. Активизировался режим поиска кода. Когда на экране появится символ громкости, отпустите кнопку кода. Индикаторная лампочка погаснет.



 
Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2




Español

A.Ingresa el código

 
1. Encender el televisor, apunte el control remoto hacia televisor, luego encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos



 
2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código



 3. Ingresar primer conjunto de código de tres dígitos cada vez que un dígito es la entrada, la luz de indicación parpadea una vez, después que todos los 3 dígitos han ingresado, la luz de indicador estaría apagado, si el código es más de un conjunto, por favor, utilice la primera.



 4. prueba si otros botones de función podría funcionar bien, como el botón de silencio (mute) si no, repita los pasos 2 hasta que encuentre un conjunto de código adecuado.



B. La búsqueda manual del código

1. Encender el televisor, apunte el control remoto hacia televisor.



2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

 
3, presione el botón de volumen + una vez y luego suéltelo. ver si el símbolo de volumen aparece en la pantalla de la TV, si no se produce tal símbolo, repita el procedimiento.

4, Después de que el símbolo de volumen aparece, prueba otro botón de función (excepto el ajuste(SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará , lo que significa que la configuración se ha terminado.


2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código



3, presione el botón de volumen + una vez y luego suéltelo. ver si el símbolo de volumen aparece en la pantalla de la TV, si no se produce tal símbolo, repita el procedimiento.




 4, Después de que el símbolo de volumen aparece, prueba otro botón de función (excepto el ajuste(SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará , lo que significa que la configuración se ha terminado.




C. La búsqueda automática del códigos.

 
1, Encender el televisor , apunte el control remoto hacia televisor.



 
2 Presione y mantenga el botón de ajuste(SET) durante unos 6 segundos hasta la luz indicador se enciende.



 Ver si el símbolo de volumen aparece en la pantalla , si es así,suerte de inmediato el botón SET para detener la búsqueda automática.



 3, prueba otro botón de función (excepto el ajuste(SET), POWER), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará , lo que significa que la configuración se ha terminado. si no, repita los pasos 2 hasta que encuentre el código adecuado.



D. Mode de búsqueda de punto a punto


1, Encender el televisor manualmente, apunte el mando a distancia hacia el televisivo , busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0.



2. Table de los simbóle correspondant a la marca

P MODE	E MODE	ASPECT	SLEEP	MENU	SOURCE	1	2	3	4	5	6	7
AKIRA	ACC	BBK	ELBEB	SUPRA	SHARP	SONY	Panasonic	SANYO	HITACHI	TOSHIBA	PHILIPS	
8	9	JVC	0	SYS	GUIDE	TV	RED	GREEN	YELLOW	BLUE		
LG	SAMSUNG	Haier	SKYWORTHY	PHILIPS	TCL	PRIMA	Haier	KONKA	DEEPO	JVC		

 2, pulsada botón de símbolo de marca correspondiente,durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien , si no, repita el procedimientos.




3, presione el botón "SET", despues pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica



E. Restaurar los ajustes de fábrica

 Pulse el botón "SET", despues pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica



Warm Tips

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "Inputting code", if it can't control your device,

Please input the other codes according to sequence

- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator off, turn off step 1.

• who you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

- Remote Controlling Distance: About 8 meters (varies by different types)
- Battery Type: two pieces of AAA Batteries

If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product.

CRC 707V

Instruction For Universal LCD/LED TV Remote Controller



4-3-2010-002 BBK BBK EN-31603B HOB158 BBK LT1504 HOB332 BBKCAMERON HOB380 RC2465 HOB387 RC2603 HVD208 BBK HVD209 RC1529 HOB228 LCD 831 HOB283 SUPRA 4627STV-LC1504 HYUNDAI 1587RCF1B HOB302 SUPRA 506STV-LC1515 HOB303 SUPRA RC3b HOB327 Supra RC3b HOB328 Supra RCF3b




HOB409 SUPRA Y-72C2 HOB410 SUPRA RC6b HOB411 SUPRA RC12 RCF1B RCF1B SUPRA BD-212 SUPRA HOF12H126GPD11 SUPRA RC1b SUPRA RC5b SUPRA RC5db SUPRA RC13b SUPRA RC-118-0B SUPRA STV-LC2615ED HOB168 SHIVAKI BT0451C HOB231 SHIVAKI 02




ROLSEN ER-31607R HTC056 RC1994907-01 HTC058 RC198 HOB333 81E8.29 HOB394 81E503 HOB227 ORION HOB252 OPENBOX-1253 HOB281 MYSTERY 5195 HOB282 MYSTERY 8151 MYSTERY KT6957 6857 HOB301 MTV-1914LW HOB326 LCD LED TV NEW MESTERY LCD LED TV NEW HSR499 HIVION HOB402 ISTAR






HOB 403 iS TAR HOB 405 iS TAR ER-31607 HOB438 ER-31607-1098# LCD-2277RC HOB302 HYUNDAI 1587RCF1B HOB376 HLCD2202GCOVA1028J HOB390 CH-2145 FUSION RC3B-1042 HOB198 FUNAI 48KEY IR 1628 FUNAIP/C221 HOB018 ELENBERG Y27401 HOB034 ELENBERG HOB151 BERICOM008

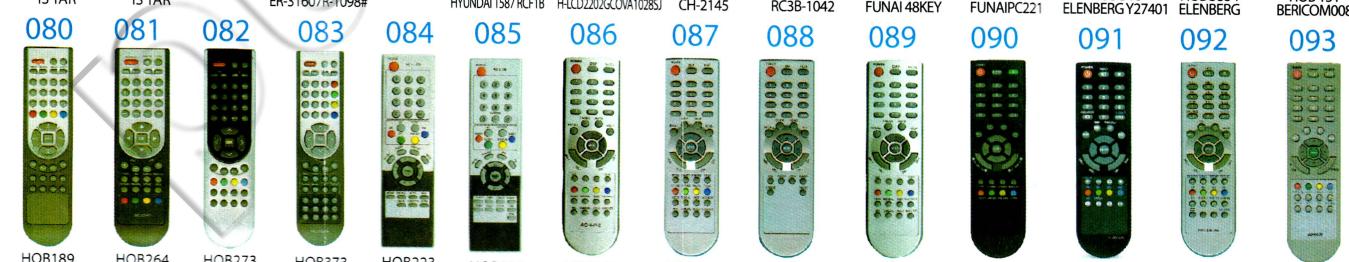

HOB189 HOB189 HOB264 RC-A3-01 HOB273 HOB273 HOB373 EN-21662B HOB223 RC-L-05 HOB225 RC-L-06 HOB108 ACH-P-2 HOB149 BERICOM006 HOB150 BERICOM007 HOB206 EL-41UA299 HOB329 T15E01MT HOB330 H-LED32V6 HOB341 STV-LC1914W HOB418 ZD-RC30

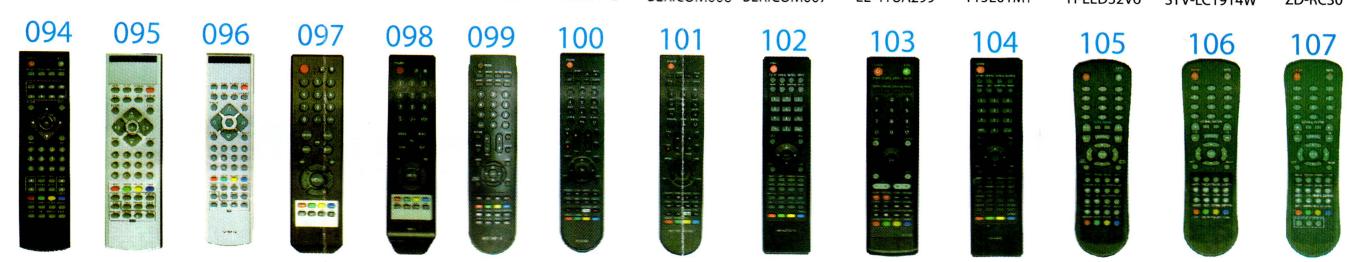

   DMTECH DMTECH HOB262 HOB262 HOB344 HOF45A1-2 HOB249 PARS HOB292 H502-2 HOB013 HOF-54B1.4 HOB339 GIS2138 HOB381 HOF12E148GPD5 HOB346 HOF10G705GPD9 SONIQ QT-112 SUNSTECH TL1970HD HOB195 H-LCDDVD2200 HOB196 HOB196 HOB314 Singer LCDKZG-108

 HOB386 RM-611	 IR1492SENCOR	 HOB310	 HOB342	 GHOF12841GPDI1	 HOB382	 HOB22-NF0210D NF020D-AFG10A-FG020D-4N1	 NF039RD NF039RD	 PC221 01	 PC221 02	 BC105B BC105B	 davtron LCD-TV	 HOB358 RC-A03	 RC A06	 RC A10	
 32HD-TELEFUNKEN	 KAIMY KAIMY	 acer acer	 HOB162 BERICOM009	 HOB187 GK23J6-C15	 LCD-2699	 HOB229 OPTICUM9600TS20	 HOB242 RC1994925	 HOB253 SNOWA	 HOB331 AKAI A4001032	 HOB353 KM1128	 HOB368 S5 S6 S7 S8 S9	 LCD-2318	 HOD142 HOD142		
 HOD148 VT-L9A11	 HSR553 CYFROWYPOLSAT	 HSR585 IPM PLATFORM	 Singer LCD TV 901-7650-31SG1G	 LCD-TV FU-1	 LCT 01	 LCT 02	 148 148	 HOB393 12-17-2011_001	 150	 AOC-01	 AOC-02	 BENQ-01	 BENQ-02		
 BENQ-03	 BENQ-04	 BENQ-05	 VIZIO	 NEC RP-42L1	 SANYO JXPYR	 ROLSEN RL-32L700U	 POLYTRON 81f579	 SAM_2446	 SAM_2443	 SAM_2457	 LCD-TV	 AKAI A3001012	 AKAI CX-507		
 BBK EN-31907	 CHANGHONG GHK-4421A	 E-RCU-015	 BBK_EN-31907	 Benq	 china	 EcoStar 2	 HCH067-CGANGHONG GHK-4421A	 Heir2	 HOB477 AKAI CX-507	 HOB478 E-RCU-015	 HOB479 AKAI A3001012	 HOB484 Akai LT4-15A15M	 HO8489 MESTERYLCDLEDTV/NEW		
 HOB490 Polar MTR-D18A	 HOB491 Polar 55TVC6002	 Orient	 PROTON 2	 POLYTRON EN-31618P-B1E878	 HOB864 SNOWA T202-1	 HOB455 ELECTRONIT-81100	 HOB457 RL-32L700U 3D	 BRAVIS LED 2868 HQ	 HOB464 DIGITAL DLE-4011	 HOB465 LUXEON LED3213 HQ	 HOB466 ORION EP 22 LCD 2623	 ORION EP HAIER	 HOB493 SUPRA	 HOB494 SUPRA	
 HOB498 SHOWNIC	 LEA-19V07P	 IZUMI	 81F579	 ORION OR-LCD2	 FUSION RC21b	 SUPRA RC6w	 SUPRA RC8b	 SUPRA RC10w	 SUPRA RC18b	 RC-LEM100	 BBK RC-LEM101	 BBK RC-LEM100	 IZUMI TL26H21B		

 388 JAC	 389 SKY LINE	 390 TRUMAN	 391 union tech	 396 ATLAS HD100	 397 HO8688 ATLSS HD-200S	 398 KK-Y331J	 399 KK-Y331J	 400 HD LED100	 401 GBTY ONGOV59	 402 XY-B02E	 403 LCD TV PHONAR	 405 PHONAR LED TV	 406 DAWA MV
 407 iDEA	 408 IDEA	 409 iDEA	 410 iDEA	 411 iDEA	 412 iDEA	 413 iDEA	 414 iDEA	 415 AOC-02	 401 DEX LT-2220	 417 ORION LED2643	 418 Akai SLP-006P	 419 Fusio FLTV 22H11	 420 Fusio FLTV 33H17
 421 FUSION RC15b	 422 Shivaki k77	 423 Shivaki k78	 424 Supra TV-DVD	 426 RC-GK22G1	 427 H-LCD3210	 428 LED321LC	 429 SKYPRIME HD	 430 SUPRA RC21b-1219	 431 ORION LCD	 432 TC 1860F1-RS	 433 JH-11370	 434 LED-851	 435 RC-D3
 436 YC-53	 437 STV-22LED5	 438 LED-EH4720BF	 439 DNS M28AM8	 440 051D RED	 441 33585	 442 RC3729	 442 HOB842	 442 34090	 442 34091	 443 RC31277	 444 Fusion RC25b	 445 RCF23b	 446 RC-E23
 449 AKI AK61	 450 AKILCD AK66	 451 AKILCD AK68	 452 AKI-OND IGO LCD	 453 ONIDA LCD	 454 ONIDA LCD ON87	 516 OS1D BLACK	 520 SNOWA51163	 528 BLAUPUNKT	 531 J-1274	 540 MERTER33186	 542 BRAVIS IFD-1615	 500 STV-42LED5	 544 ONIDA LCD1
 545 Akai HOF83J001	 546 Polar 94LTV6004	 547 AN-LT3222 AN-LT3225 AN-LT2416	 548 FUSION HY-079	 549 SATURN LED40FHD500U	 540 DEXP 16A3000	 540 RUBIN RB-28D7T2C	 550 DNS S19ASL1	 551 RM-NST60	 553 RM-SK09				



For more details
Pls scan QR code