 


URC1517 Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV.

Introduction: URC1517 is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

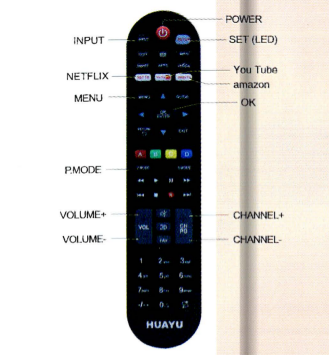

Battery Installation: In accordance with the "+,-" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-ratoned), which is shown in the figure.

Battery Description: The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened. Please do not put old and new batteries or different types of batteries together. In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries. You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

Methods for setting remote controller: This remote controller has the following methods for setup, you can choose any of them.

A. Inputting code: 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2. Press "SET" button, then press "INPUT" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.

3. Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.

4. Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

B. Manually searching for the code: 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2. Press "SET" button, then press "INPUT" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.

3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4. Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

C. Automatically searching code: 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2. Press "SET" button about 3s till the indicator lights, then release the button. Now the remote control will enter into the state of automatically searching code. Please pay attention to your TV, when the volume symbol appears on your TV, press "OK" button at once, setting is finished.

3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

D. Point to Point Brand Searching: 1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SHARP= "1"

2. Press "SET" button, then press "INPUT" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.

3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4. Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

E. Restore factory Settings: Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

A. Ввод кода: 1. Включите телевизор в режиме обычного воспроизведения и направьте пульт на переднюю панель телевизора. Нажмите и удерживайте кнопку SET ("НАСТРОЙКА") в течение примерно 3 секунд, пока не загорится индикатор, затем отпустите кнопку. Пульт перейдет в режим ввода кода.

2. Нажмите кнопку SET ("НАСТРОЙКА"), затем нажмите кнопку INPUT ("ВВОД"), пока не загорится световой индикатор, после чего отпустите обе кнопки. Пульт перейдет в режим ввода кода.

3. Введите первый набор трехзначного кода, который вы нашли в списке кодов. При вводе каждой цифры световой индикатор мигнет один раз. Когда вы введете все три цифры, световой индикатор погаснет. Настройка завершена.

4. Проверьте работоспособность других функциональных кнопок (за исключением кнопок POWER ("ПИТАНИЕ") и VOLUME ("ГРОМКОСТЬ")). Если они не работают, повторите шаги 2-3, пока не найдете подходящий код.

B. Поиск кода вручную: 1. Включите телевизор в режиме обычного воспроизведения и направьте пульт на переднюю панель телевизора.

2. Нажмите кнопку SET ("НАСТРОЙКА"), затем нажмите кнопку INPUT ("ВВОД"), пока не загорится световой индикатор, после чего отпустите обе кнопки. Пульт перейдет в режим поиска кода вручную.

3. Нажмите кнопку VOL+ ("УВЕЛИЧИТЬ ГРОМКОСТЬ") один раз, индикатор мигнет один раз. Убедитесь, появляется ли на вашем телевизоре символ громкости, если нет, повторите эту операцию до появления на экране символа громкости.

4. Проверьте работоспособность других функциональных кнопок (за исключением кнопок POWER ("ПИТАНИЕ") и VOLUME ("ГРОМКОСТЬ")). Убедившись, что пульт дистанционного управления функционирует, нажмите кнопку SET ("НАСТРОЙКА"), индикатор погаснет. Настройка завершена.

C. Автоматический поиск кода: 1. Включите телевизор в режиме обычного воспроизведения и направьте пульт на переднюю панель телевизора. Нажмите и удерживайте кнопку SET ("НАСТРОЙКА") в течение примерно 3 секунд, пока не загорится индикатор, затем отпустите кнопку. Пульт перейдет в режим автоматического поиска кода.

2. Мантига presionado el botón "CONFIGURAR" durante unos 3 segundos hasta que se encienda el indicador de trabajo, luego suéltelo y el dispositivo entra en el estado de búsqueda automática. Preste atención a si el símbolo de volumen del televisor se muestra en la pantalla. Si se muestra, presione de inmediato el botón "OK" para parar la búsqueda automática.

3. Compruebe si las funciones de otros botones son normales (excepto el botón de encendido y el botón de volumen). Si no, repita los pasos 2 y 3 hasta que encuentre el código correcto.

D. Método de búsqueda de código a través de marca: 1. Encienda el televisor manualmente para ponerlo en reproducción normal y apunte el control remoto al televisor. Busque el símbolo de la marca correspondiente de la marca de su televisor, por ejemplo: SHARP = "1".

2. Mantenga presionado el botón "CONFIGURAR" durante unos 3 segundos hasta que se encienda el indicador de trabajo, luego suéltelo y el dispositivo entra en el estado de búsqueda manual.

В. Método de búsqueda manual de código: 1. Encienda el televisor manualmente para ponerlo en reproducción normal y apunte el control remoto directamente al televisor.

2. Mantenga presionado el botón "CONFIGURAR" hasta que se encienda el indicador de trabajo, luego presione el botón "ENTRADA" hasta que se encienda el indicador de trabajo, luego suéltelo y el dispositivo entra en el estado de búsqueda manual.

3. Presione el botón "Volumen +" y suéltelo. El indicador parpadeará una vez. Preste atención a si el símbolo de volumen del televisor se muestra en la pantalla. De lo contrario, repita este paso.

4. Después de que aparezca el símbolo de volumen, compruebe si las funciones de otros botones son normales (excepto el botón de encendido y el botón de volumen). Si son normales, presione el botón "CONFIGURAR" inmediatamente, el indicador se apagará, lo que indica que se completó la configuración.

E. Cómo restaurar la configuración de fábrica: Mantenga presionado el botón "SET" ("CONFIGURAR") y presione el botón "0", luego suéltelo, el indicador parpadeará cuatro veces para restaurar la configuración de fábrica.

Warm Tips: If you have any problems when you set or use this remote controller, please try to do as follows: When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, please input the other codes according to sequence. If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1. who you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters: Remote Controlling Distance: About 8 meters (varies by different types); Battery Type: two pieces of AAA Batteries After-sales Service: If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product. The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

Table with 10 columns: Brand, Model, Code, Brand, Model, Code, Brand, Model, Code, Brand, Model, Code. Includes brands like AKAI, AKIRA, HISENSE, BBK, AOC, BENQ, ARCLIK, BEKO, BLAUPUNKT, BRAUN, GHK.

D. Поиск марки: 1. Включите телевизор в режиме обычного воспроизведения и направьте пульт на переднюю панель телевизора. Найдите символ, соответствующий марке вашего телевизора, например: SHARP= "1".

2. Нажмите кнопку соответствующей марки и удерживайте ее в течение 3 секунд, индикатор будет мигать. Когда на вашем телевизоре появится символ громкости, отпустите кнопку. Индикатор выключится, настройка завершена.

3. Проверьте работоспособность других функциональных кнопок (за исключением кнопок POWER ("ПИТАНИЕ") и VOLUME ("ГРОМКОСТЬ")). Если они не работают в нормальном режиме, повторите шаги 2 и 3, пока не найдете подходящий код.

Список марок: Table listing various brands and their corresponding codes for manual search.

A. Método de entrada de código: 1. Encienda el televisor manualmente para ponerlo en reproducción normal, y apunte el control remoto al televisor. Encuentre el código de 3 dígitos para la marca correspondiente en la tabla de códigos.

2. Mantenga presionado el botón "CONFIGURAR" durante unos 3 segundos hasta que se encienda el indicador de trabajo, luego suéltelo y el dispositivo entra en el estado de búsqueda automática. Preste atención a si el símbolo de volumen del televisor se muestra en la pantalla. Si se muestra, presione de inmediato el botón "OK" para parar la búsqueda automática.

3. Compruebe si las funciones de otros botones son normales (excepto el botón de encendido y el botón de volumen). Si no, repita los pasos 2 y 3 hasta que encuentre el código correcto.

D. Método de búsqueda de código a través de marca: 1. Encienda el televisor manualmente para ponerlo en reproducción normal y apunte el control remoto al televisor. Busque el símbolo de la marca correspondiente de la marca de su televisor, por ejemplo: SHARP = "1".

2. Mantenga presionado el botón "CONFIGURAR" durante unos 3 segundos hasta que se encienda el indicador de trabajo, luego presione el botón "ENTRADA" hasta que se encienda el indicador de trabajo, luego suéltelo y el dispositivo entra en el estado de búsqueda manual.

3. Compruebe si las funciones de otros botones son normales (excepto el botón de volumen). Si no, repita los pasos 2-3 hasta que encuentre el código correcto.

Lista de marcas: Table listing various brands and their corresponding codes for manual search.

E. Cómo restaurar la configuración de fábrica: Mantenga presionado el botón "SET" ("CONFIGURAR") y presione el botón "0", luego suéltelo, el indicador parpadeará cuatro veces para restaurar la configuración de fábrica.

Warm Tips: If you have any problems when you set or use this remote controller, please try to do as follows: When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, please input the other codes according to sequence. If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1. who you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters: Remote Controlling Distance: About 8 meters (varies by different types); Battery Type: two pieces of AAA Batteries After-sales Service: If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product. The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

Table with 10 columns: Brand, Model, Code, Brand, Model, Code, Brand, Model, Code, Brand, Model, Code. Includes brands like AKAI, AKIRA, HISENSE, BBK, AOC, BENQ, ARCLIK, BEKO, BLAUPUNKT, BRAUN, GHK.





MYSTERY TVD34 BRAVIS LED2868 HQ Hyundai H-LED24V16 LED32A4500 BRAVIS LED-32H70B BRAVIS LED-EH4720BF BRAVIS ZSJ-5104 BRAVIS LED-1615 BRAVIS 55D2000+T2 SUPRA STV-LC32T880WL SUPRA STV-LC32T880WL CHANGHONG RC-A03 CHANGHONG RC-A06 CHANGHONG RC-A06 DAEWOO RC-403B1 DAEWOO HDW080 DAEWOO RC-850PT T21L08-A001 DEXP 32A3000 SENCOR IR1492 Shivaki K77 Shivaki K78 SATURN LED3211LC DNS V3202500 V4008200 DEXP 32A7000 DEXP EN2527D HISENSE EN2827 HISENSE ER-22601A F40B7000H SATURN LED29HD300U DEXP F24B7200VE THOMSON MTV-3210W DEXP F32B7000B HISENSE H32B8200K F058300K DEXP H20C3200C DEXP RC02-T338 DNS M32DM5 DNS S19ASL1 DNS M39DM8 DNS M28AM8 ELECTRON 54TK ELECTRON RK41A ELECTRON RC-GK22G1 ELEBERG HOF-54B1.3 ELEBERG HOF-54B1.4 ELEBERG LTV ELEBERG 32AH4230



 
Elenberg 40AF4130 ERISSON 1CZPS ERISSON 21SF30 ERISSON 21UF30 ERISSON 19LET21 ERISSON 5110P01FHD FUNAI 48KEY FUNAI NF021RD FUNAI NF021RD FUNAI LCD-A1506 FUNAI NF039RD FUNAI IR162H IR1805 IR1808 Fusion FTV-32H17 Fusion LTV-32L40B Fusion RC256 Fusion RC-E23 Fusion ZSJ-5104 LCD NEW HOF-54B1.4 GI HDX403P GI HOF12E148 GPD5 GI HOF11L1610P012 GI-S8126 GI UNI GRUNDIG RC-GD1 Grundig RC2134602 GRUNDIG RC3214803 32VLE6500WM HAIER HTR-D18A HAIER HTR-A10 Haier HTR-A18H Haier HTR-A18E Haier RL57S HARPER 28F60T HARPER 42F60T HISENSE EN-31603B HISENSE EN-31603A Roisen ER-33904R HISENSE EN-31906D HISENSE EN-21662B HISENSE ER-31607R HISENSE EN-31603A HISENSE EN-31603B BBK EN-31907 HISENSE EN-22652A HISENSE EN-32963HS HISENSE EN-32951A HISENSE ER-32961HS SUPRA ER-22654 HISENSE ER-22601A




HISENSE ER-22655HS Roisen ER-22642R Roisen ER-22641R HISENSE EN-33827A HISENSE LT-S21610 HISENSE EN-21662Z BGH EN2h27B HISENSE en2h27hs Hisense EN-32963HS HISENSE EN-31603A BGH ER-33911BN HISENSE EN-22652A HISENSE EN-33926A HISENSE CN3B16 HISENSE CN3B12 HISENSE CN3A26 HISENSE ER-22655HS HISENSE ER-22642R HISENSE ER-22641R HISENSE ER-31607R BGH EN2h27B HISENSE en2h27hs HISENSE EN-22652A HISENSE EN-31906D HISENSE EN-31603A HISENSE ER-32961HS HISENSE EN-21662B HISENSE N-32963HS BBK EN-31907 SUPRA ER-22654 HISENSE ER-22601A HISENSE EN-33927A HISENSE EN-33926A HISENSE en2h27hs HISENSE EN2A27 HISENSE ER-31607R HISENSE EN-22652A HISENSE ER-22655HS Roisen ER-22642R Roisen ER-22641R SUPRA ER-22654 HISENSE ER-22601A BGH EN2h27B BGH ER-33911BN Hisense CN3B16 HITACHI HORIZONTAL RC-L-03



HYUNDAI H-LCD2200 HYUNDAI 1587 RCF1B HYUNDAI H-LED32V6 HYUNDAI H-LCD2202 HYUNDAI H-LCD3210 HYUNDAI 24V5 HYUNDAI 4182 HYUNDAI 4628 HYUNDAI 4631 HYUNDAI 5227 HYUNDAI 9491 HYUNDAI 5272 HYUNDAI H-LCD3206 HYUNDAI 5195 HYUNDAI 8151 HYUNDAI H-LCD1516 (TV9) 7061 HYUNDAI AKIRA CT-29USLSAN-TT_1 HYUNDAI 2543 HYUNDAI Erisson TVD34 HYUNDAI 4627 TL26H21B IZUMI 0152 IZUMI TL19H405B IZUMI TLE32F300B IZUMI TLE22F0330B IZUMI TL20S321B JVC KT1157-SX JVC VICTOR JVC RM-C3184 JVC LT4211 JVC LT2226LWI KVANT SMART TV remote_control KVANT RC53KEY T2 KVANT RC53KEY SMART TV MYSTERY MTV-3226LWI MYSTERY MTV-3226LWI MYSTERY 5195 MYSTERY 8151 MYSTERY KT6957 6857 MYSTERY KT6949 MTV -1907W ORION RC-01 OTV19H1 SHIVAKI LCD-831 GENERAL LCD-831 GENERAL LCD-832

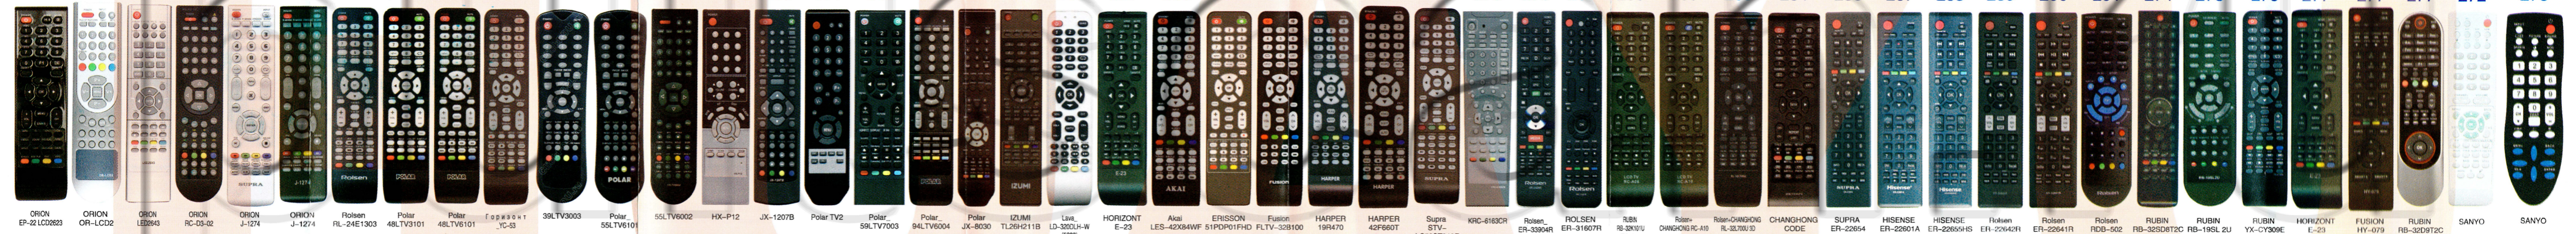

ORION EP-22 LCD26223 ORION OR-LCD2 ORION LED2643 ORION RC-D3-02 ORION J-1274 ORION J-1274 Rolsen RL-24E1303 Polar 48LTV3101 Polar 48LTV6101 Горизонт_YC-53 39LTV3003 Polar_55LTV6101 55LTV6002 HX-P12 JX-1207B Polar TV2 Polar_59LTV7003 Polar_94LTV6004 Polar JX-8030 IZUMI TL26H211B Lava_LD-320DLH-W (5628) HORIZONT E-23 Akai LES-42X84WF ERISON 51PDP01FHD Fusion FLTV-32B100 HARPER 19R470 HARPER 42F660T Supra STV-LC50ST910F KRC-6163CR Rolsen_ER-33904R ROLSEN ER-31607R RUBIN RB-32K101U (RC-A06) Rolsen-CHANGHONG RC-A10 Rolsen-CHANGHONG RL-32L70013D CHANGHONG CODE SUPRA ER-22654 HISENSE ER-22601A HISENSE ER-22655HS Rolsen ER-22V42FR Rolsen ER-22641R Rolsen RDB-502 RUBIN RB-32SD8T2C RUBIN RB-19SL 2U RUBIN YX-CY309E HORIZONT E-23 FUSION HY-079 RUBIN RB-32D9T2C RB-39D9T2C SANYO SANYO

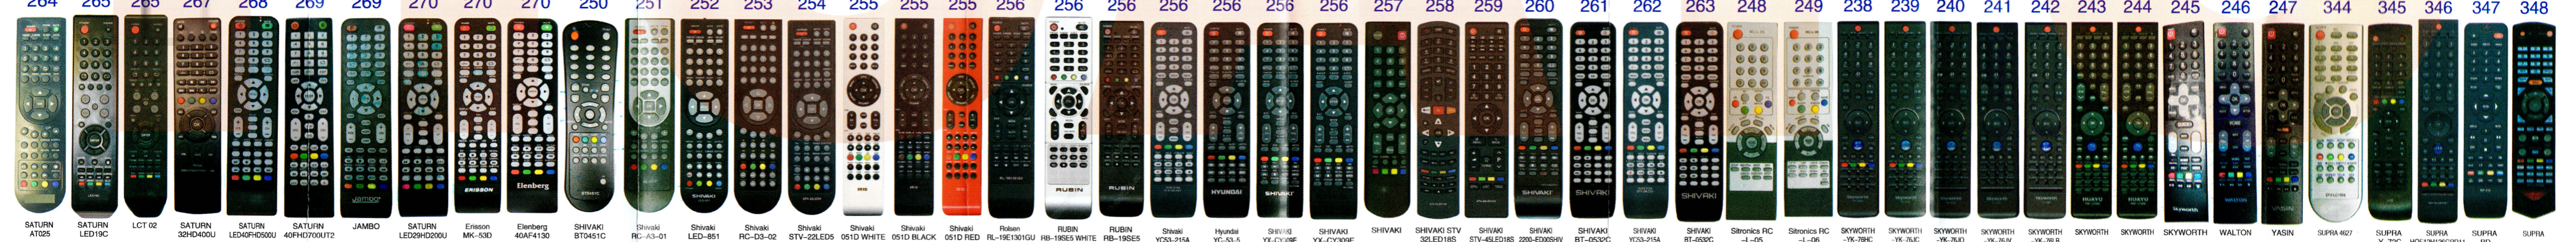 

SATURN AT025 SATURN LED19C LCT 02 SATURN 32HD400U SATURN LED40FDH500U SATURN 40FH700U2 JAMBO SATURN LED29HD200U Erisson MK-53D Elenberg 40AF4130 SHIVAKI BT0451C Shivaki RC-A3-01 Shivaki LED-851 Shivaki RC-D3-02 Shivaki STV-22LED5 Shivaki 051D WHITE Shivaki 051D BLACK Shivaki 051D RED Rolsen RL-19E1301GU RUBIN RB-19SE5 WHITE RUBIN RB-19SE5 Shivaki YCS3-215A Hyundai YC-53-5 SHIVAKI YX-CY309E SHIVAKI YX-CY309E SHIVAKI SHIVAKI STV 32LED18S SHIVAKI 2200-ED00SHIV SHIVAKI BT-0532C SHIVAKI BT-0532C SHIVAKI YCS3-215A (STV-24LED3) SHIVAKI BT-0532C Sitronics RC-L-05 Sitronics RC-L-06 SKYWORTH -YK-76HC SKYWORTH -YK-76JC SKYWORTH -YK-76JO SKYWORTH -YK-76JV SKYWORTH -YK-76LB SKYWORTH SKYWORTH SKYWORTH SKYWORTH SKYWORTH SKYWORTH SKYWORTH SKYWORTH SKYWORTH SKYWORTH WALTON YASIN SUPRA 4827 SUPRA Y-72C SUPRA HOF12H126GPD11 SUPRA BD

