



HUAYU® RM-F789

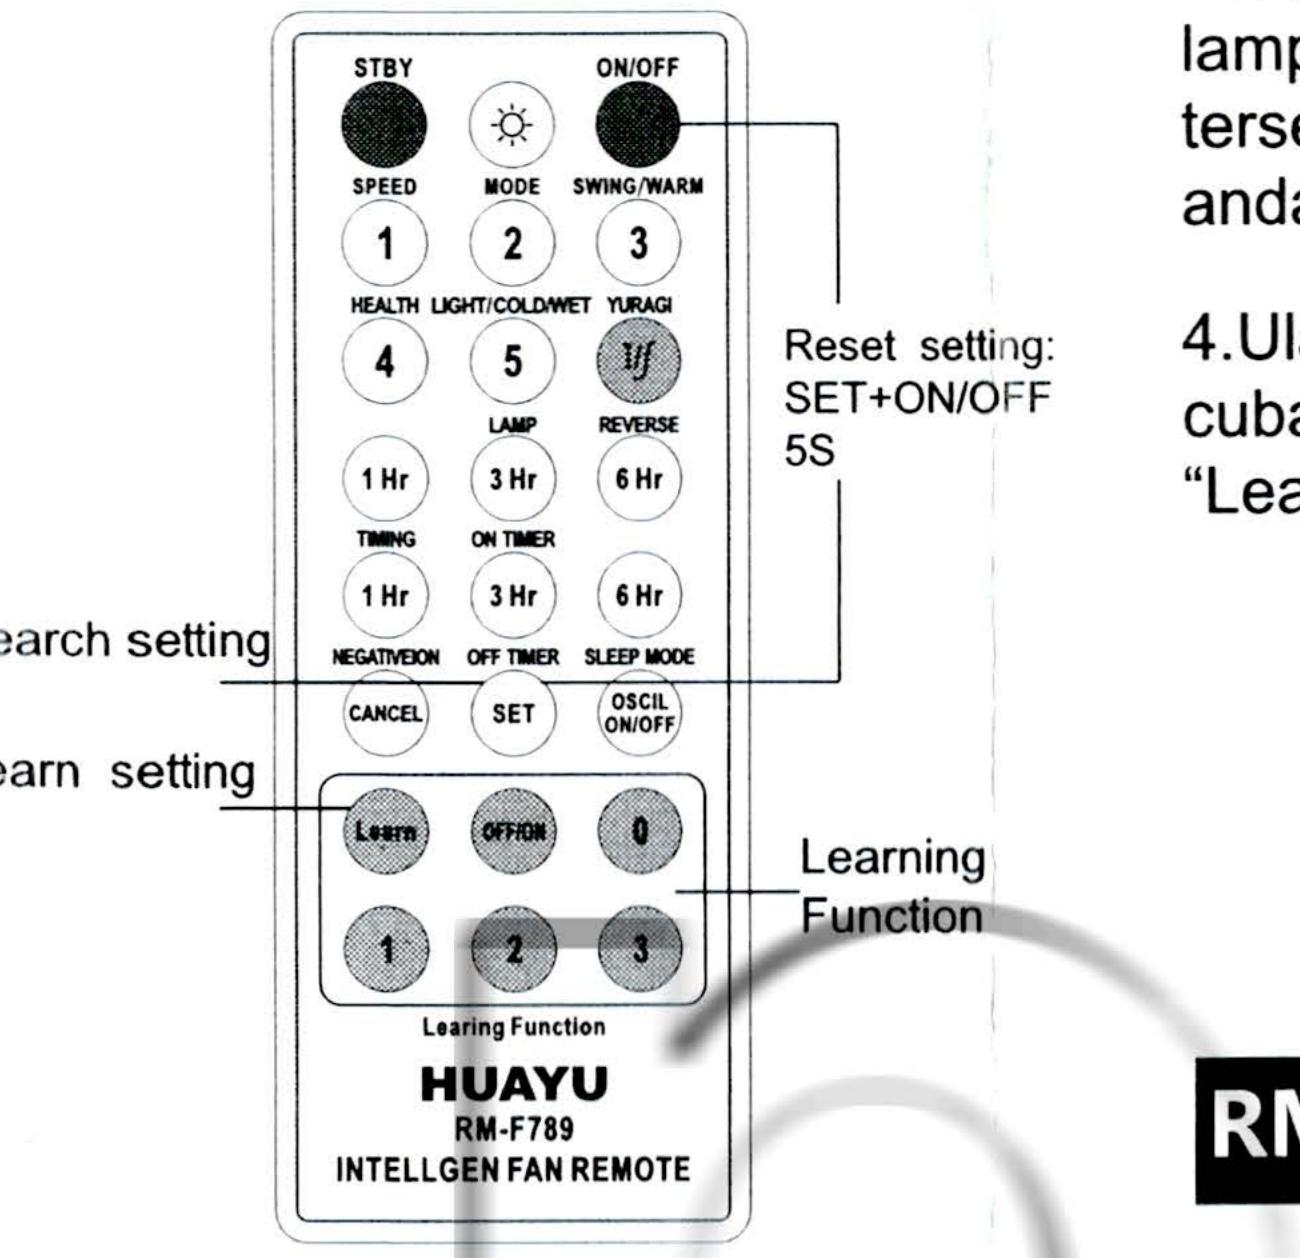


RM-F789 Langkah-langkah penggunaan

1. Tekan butang "Learn" selama 3 saat dan lepaskan, lampu merah akan kekal menyala.

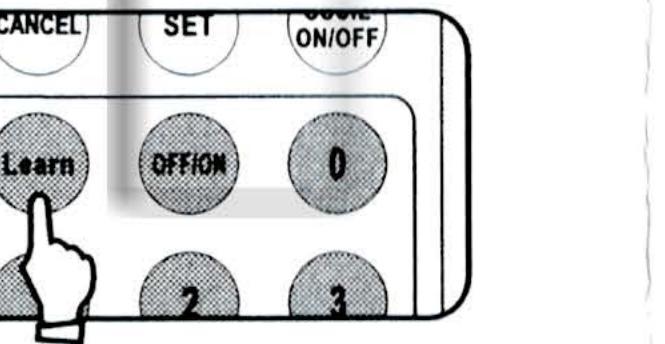


2. Dalam masa 10 saat, tekan butang "OFF/ON" dan kelihatan lampu merah berkelip-kelip.

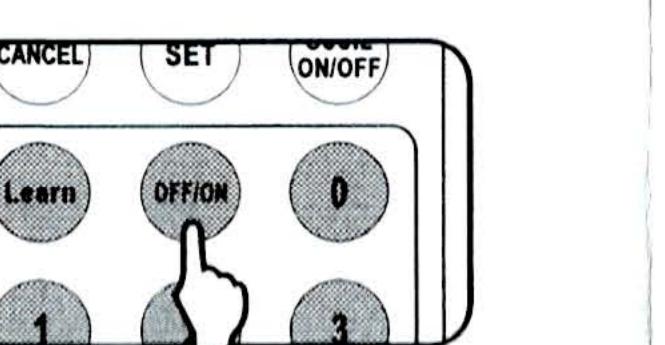

3. Jarakkan bahagian depan alat kawalan asal bertentangan alat sejauh 3cm dan tekan butang "OFF/ON" selama 3 saat, setelah lampu merah berkelip 3 kali, lampu tersebut akan kekal menyala tanda anda telah berjaya.

4. Ulang langkah ke-2 dan ke-3 dan cuba tekan butang lain, tekan butang "Learn" sekali lagi.

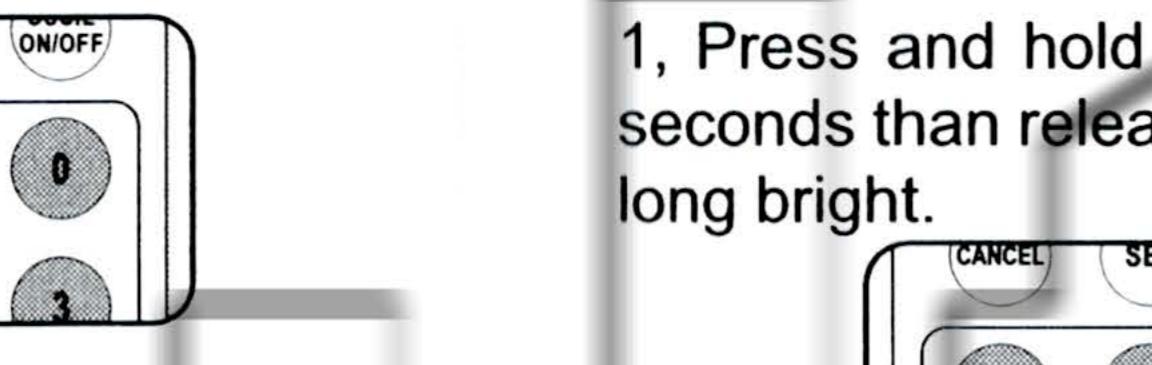


RM-F789 学习方法

1, 按住本机"Learn"键3秒后松开, 红灯长亮。




2, 10秒内按下本机学习区"OFF/ON"键, 红灯闪烁。

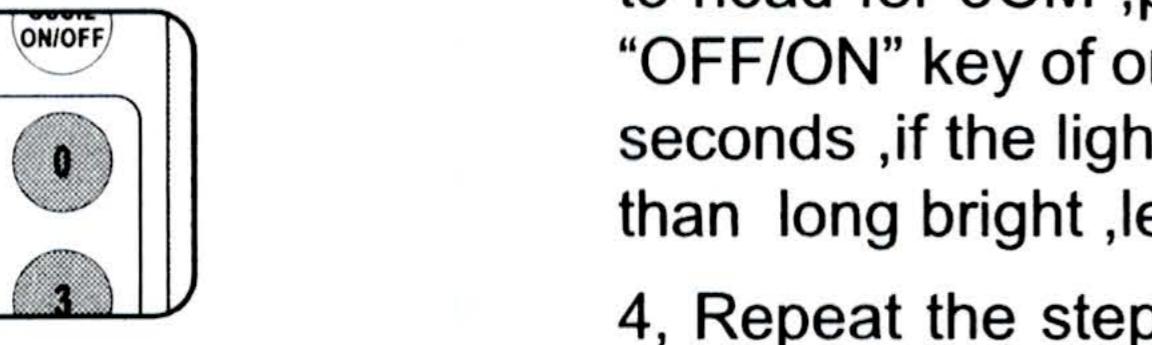


3, 将原装遥控器与本机两头相距3CM正对, 按原装遥控器"OFF/ON"键3秒, 红灯闪三下后长亮, 学习成功。

4, 重复第2,3步骤, 学习其它按键, 按一下"Learn"键, 退出。

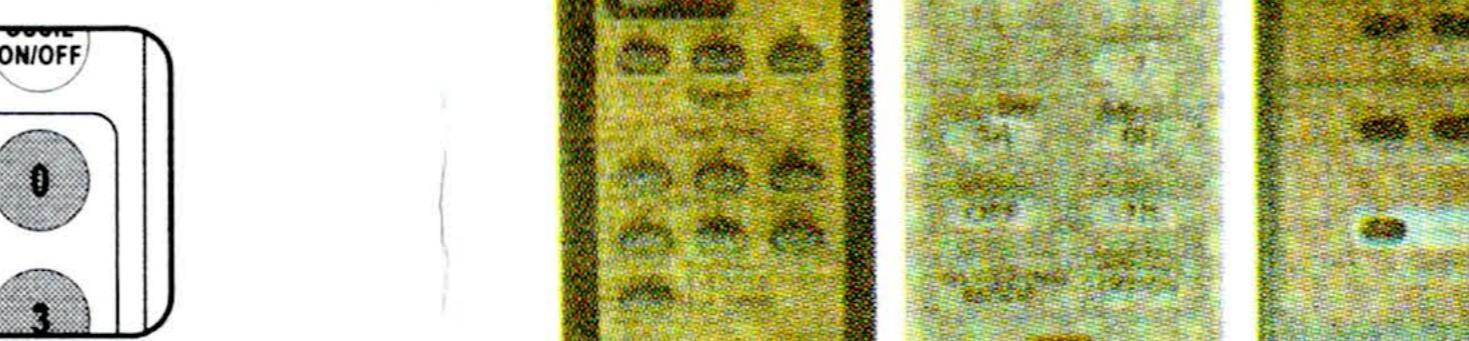

RM-F789 LEARNING MANUAL:

1, Press and hold the "Learn" key 3 seconds than release, the light will be long bright.

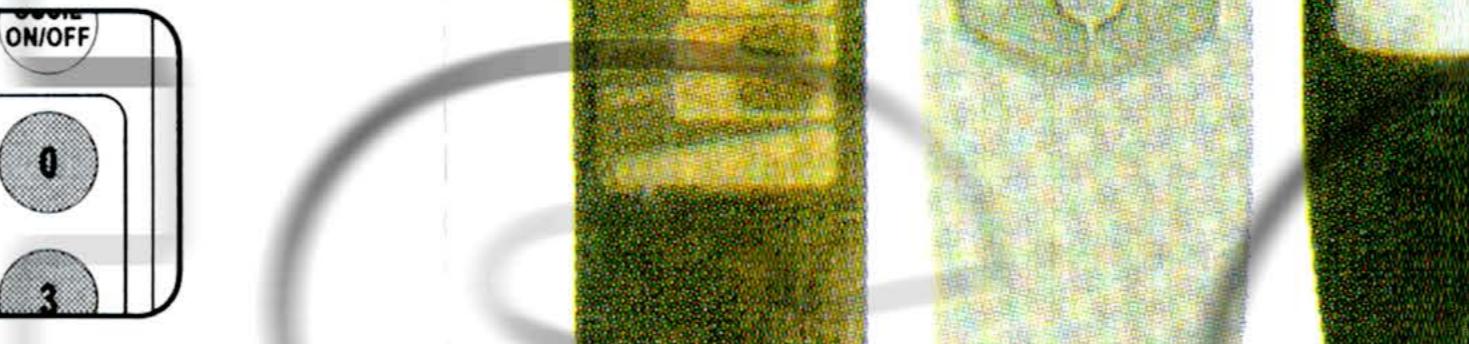


2, Press the "OFF/ON" key of this remote within 10 seconds, the light will flash.



3, Put this remote and the original remote which you want learning head to head for 3CM ,press and hold the "OFF/ON" key of original remote for 3 seconds ,if the light flash 3 times and then long bright ,learning success.

4, Repeat the step 2 and 3, learning other keys, press "Learn" key will exit the learning state.

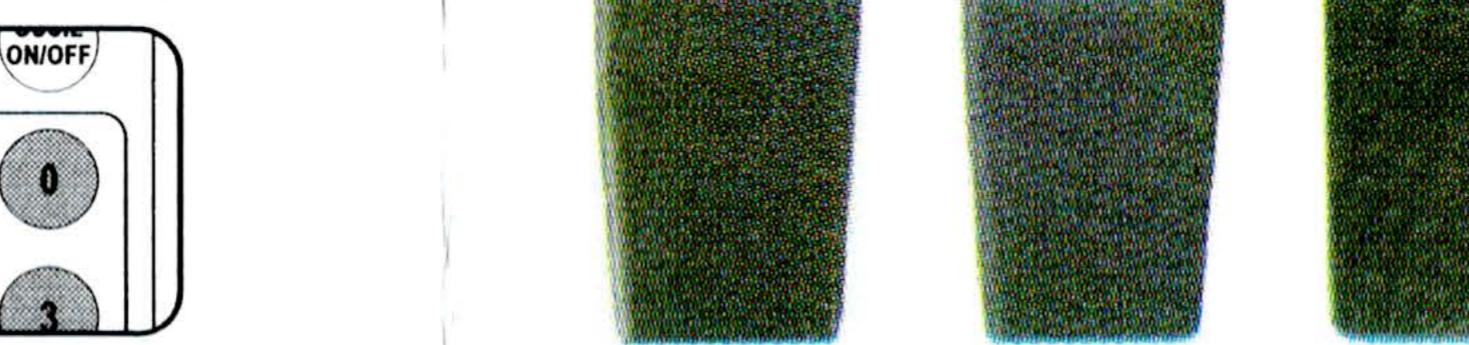

B0063783

