


RM-L1130+X Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

Introduction: RM-L1130+X is the newest universal LCD/LED TV remote controller, Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

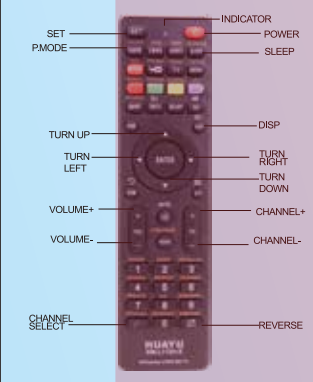

Battery Installation In accordance with the "+, -" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-rationed), which is shown in the figure.

Battery Description The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened. Please do not put old and new batteries or different types of batteries together. In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries. You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

This remote controller has the following methods for setup , you can choose any of them.

A. Inputting code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, the remote controller will be in the state of inputting code.

3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off., setting to be finished. If the code is more than one set, please use first one at first.

4, Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

B. Manually searching for the code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote

controller will be in the state of Manually searching for the code. Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

4, Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

C. Automatically searching for the code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.

2, Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.

3, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

D. Point to Point Brand Searching:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote control, for example, SKYWORTHY = "0"

2, Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.

E. Restore factory Settings Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

4, Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

A. Поиск нужной марки телевизора с помощью ввода кода вручную

1. Включите телевизор и в перечне кодов найдите тот, который соответствует марке Вашего телевизора.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.

3. Введите три первых цифры кода, соответствующего модели телевизора. После ввода кода индикатор перестанет гореть, установка завершена

B. Способ ручного поиска кода:

1. Включите телевизор и направьте на него пульт.

2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Тогда релиз, на этот раз в состоянии ручного поиска.

4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальные, нажмите кнопку "настройки", индикатор настройки гасит, настройка выполнена.

С. Модели с функцией автоматического поиска

1. Включите телевизор и направьте на него пульт.

2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнёт мигать. Пульт активизировал функцию автоматического поиска. Внимательно смотрите на экран телевизора, не отпуская кнопку "SET". Введите три первых цифры кода, соответствующего модели телевизора.

3. Проверьте работу кнопок на ПДУ (установите кнопку, кнопка питания, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

D. Поиск по бренду:

1. Найдите код, соответствующий модели вашего телевизора. Например, для SKYWORTHY — это "0". Включите телевизор и направьте на него пульт.

2. Удерживайте нажатой кнопку кода, пока не загорится индикаторная лампочка (около 3 секунд). Не отпускайте кнопку, и индикаторная лампочка начнёт мигать. Активизировался режим поиска кода. Когда на экране появится символ громкости, отпустите кнопку кода. Индикаторная лампочка погаснет. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2

4. Después de que el símbolo de volumen aparece, pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

E. Restaurar los ajustes de fábrica Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadeará dos veces, restablecer la configuración de fábrica

A. Ingresar el código

1. Encender el televisor, apunte el control remoto hacia televisor. Luego encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos

2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

3. Ingresar primer conjunto de código de tres dígitos. Cada vez que un dígito es la entrada, la luz de indicación parpadeará una vez, después que todos los 3 dígitos ha ingresado, la luz de indicador estaría aragado, si el código es más de un conjunto, por favor, utilice la primera.

B. La búsqueda manual del código

1. Encender el televisor, apunte el control remoto hacia televisor.

2. Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicador se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código

3. pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

C. La búsqueda automática del código. 1, Encender el televisor, apunte el control remoto hacia televisor. 2 Presione y mantenga el botón de ajuste (SET) durante unos 6 segundos hasta la luz indicador se enciende. Ver si el símbolo de volumen aparece en la pantalla, si es así, suelte de inmediato el botón SET para detener la búsqueda automática.

D. Modo de búsqueda de punto a punto

1, Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTHY con su símbolo 0.

2, pulsada botón de símbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadeara. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Probar si el control remoto funciona bien, si no, repita el procedimiento.

3, presione el botón de volumen + una vez y luego suéltelo. ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce tal símbolo, repita el procedimiento.

La table de symbole correspondant à la marque

Table with 10 columns: Brand, Code, Brand, Code, Brand, Code, Brand, Code, Brand, Code. Includes brands like AOC, BBK, SUPRA, etc.

4. Después de que el símbolo de volumen aparece, pruebe otro botón de función (excepto el ajuste (SET), POWER, VOLUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.

E. Restaurar los ajustes de fábrica Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadeará dos veces, restablecer la configuración de fábrica

Warm Tips

If you have any problems when you set or use this remote controller, please try to do as follow: When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.

If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.


when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

Technical parameters

Remote Controlling Distance: About 8 meters (varies by different types) Battery Type: two pieces of AAA Batteries After-sales Service If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product. The Company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

Grid of remote controllers with brand names and codes. Brands include AOC, GENERAL, IZUMI, EN, MYSTERY, AKIRA, HOB, SUPRA, BBK, HVD, RCF, HYUNDAI, ROLSEN, SHIVAKI, etc. Codes range from 034 to 043.

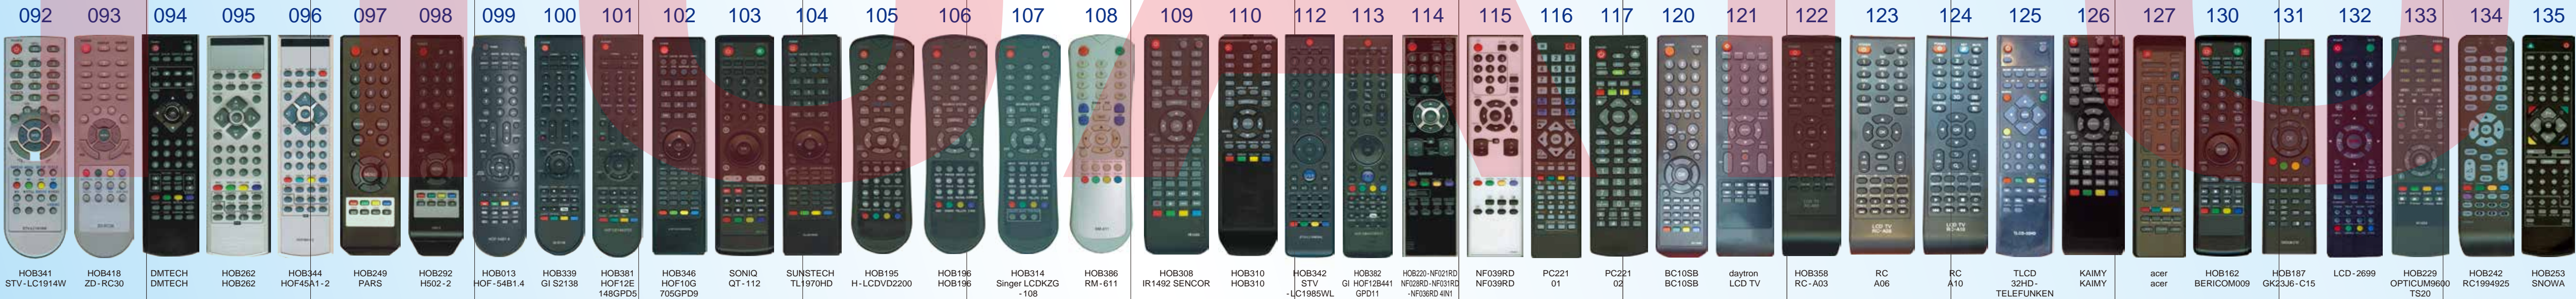

HUAYU® RM-L1130+X



136 HOB331 AKAI A4001032
137 HOB353 KM128
138 HOB368 S5 S6 S7 S8 S9
139 LCD-2318
140 HOD142 HOD142
141 HOD148 VT-L9A11
142 HSR553 CYFROWY POLSAT
143 HSR585 IPM PLATFORM
144 Singer LCD TV 901-7650-31SG1G
145 LCD TV FU-1
146 LCT 01
147 LCT 02
148 148
149 HOB393 1253
150 12-17-2011_001
151 AOC-01
152 AOC-02
153 BENQ-01
154 BENQ-02
155 BENQ-03
156 BENQ-04
157 BENQ-05
158 VIZIO
159 NEC RP-42L1
160 SANYO JXPYR
161 ROLSEN RL-32L700U
162 POLYTRON 81F579
163 SAM_2446
164 SAM_2443
165 SAM_2457
166 lcd tv
167 AKAI A3001012
168 AKAI CX-507
169 BBK EN-31907
170 CHANGHONG GHK-4421A
171 E-RCU-015
348 BBK_EN-31907
349 Benq
350 china
351 EcoStar 2



352 HCH067-CHANGHONG GHK-4421A
353 Heir 2
354 HOB477 AKAI CX-507
355 HOB478 E-RCU-015
356 HOB479 AKAI A3001012
357 HOB484 Akai LTA-15A15M
358 HOB489 MESTERY LCD LED TV NEW
359 HOB490 Polar HTR-D18A
360 HOB491 Polar 55 LTV6002
361 Orient
362 PROTON 2
363 POLYTRON EN-31618P 81E878
364 HOB864 SNOWA T202-1
365 HOB455 ELECTRON T-81100
366 HOB457 RL-32L700U 3D
367 HOB464 BRAVIS LED2868 HQ
368 HOB465 DIGITAL DLE-4011
370 HOB46 LUXEON LED3213 HQ
371 ORION EP 22 LCD2623
372 HOB493 HAIER
373 HOB494 SUPRA
374 HOB498 SHOWNIC
375 LEA-19V07P
376 IZUMI
377 81F579
378 ORION OR-LCD2
379 FUSION RC21b
380 SUPRA RC6w
381 SUPRA RC8b
382 SUPRA RC10w
383 SUPRA RC18b
384 RC-LEM100
385 BBK RC-LEM101
386 BBK RC-LEM100
387 IZUMI TL26H211B
388 JAC
389 SKY LINE
390 TRUMAN
391 union tech
396 ATLAS HD100
397 HOB688 ATLS HD-200S

