

HUAYU[®]

Instruction for
UNIVERSAL LCD/LED
TV REMOTE CONTROLLER

RM-L1376M+

Setting with Code:

- 1: If TV brand is not confirm, please find the code form the color instructions paper.
- 2: Press "**SET**" + "**POWER**", light is on,
- 3: Press three code ***, light off, setting finish.

000	001	002	003	004	005	006	007	008	009	010	011	012	013	014	015	016	017	018	019	020												
AOC AOC	CH-3423 CH-3423	GENERAL LCD-831	GENERAL LCD-832	IZUMI TL19H405B	IZUMI 0152	EN 30303D	HOT728 AK-T0-03	HOT867 AK-T0-05	HSW009 AK-2133	MYSTERY KT6957 6857	HOB117 AKIRA TC1860F1	GK23J6-C15	HOB279 AKIRA LCT-15CHST	4-3-2010-002	BBK BBK	BBK EN-31603B	HOB158 BBK LT1504	HOB332 BBK CAMERON	HOB380 RC2465	HOB387 RC-2603												
021	022	023	024	025	026	027	028	029	030	031	032	033	034	034	035	036	037	038	039	040	041	042	043	043	044	045	045	045	045	045		
HVD208 BBK	HVD209 RC1529	HOB228 LCD 831	HOB283 SUPRA 4227STV-LC1504	HYUNDAI 1587 RCF18	HOB303 SUPRA306 STV-LC1515	HOB327 Supra RC3b	HOB328 Supra RCF3b	HOB409 SUPRA Y-72C2	HOB410 SUPRA RC6b	HOB411 SUPRA RC12	RCF1B RCF1B	SUPRA BD-212	SUPRA HOF12H126GPD11	SINGER	SUPRA RC1b	SUPRA RC5b	SUPRA RC5db	SUPRA RC13b	SUPRA RC-118-0B	SUPRA STV-LC2615ED	HOB188 SHIVAKI BT0451C	HOB231 SHIVAKI 02ER-31607R	ROLSEN ER-33904R	ER-33904R	HOB389 CH-2012	HOB391 CH-4911	RC802N YA12	RC3100N08	RM-L1673			
046	047	048	049	050	051	052	053	054	055	056	057	058	059	060	061	062	063	064	065	066	067	068	069	070	071	072	073	074	075	076		
HTC056 RC1994907-01	HTC058 RC198	HOB333 81E829	81E503	HOB227 ORION	HOB252 OPENBOX-1253	HOB281 MYSTERY 5195	HOB282 MYSTERY 8151	MYSTERY KT6957 6857	HOB326 MTV-1914LW	MESTERY LCD LED TV NEW	HSR499 HIVION	HOB402 iSTAR	iSTAR	HOB405 iSTAR	ER-31607	ER-31607R	LCD-2277RC	LCD-1699RC	LCD-15ARC	HYUNDAI 1587 RCF18	H-LC22202RC01A10285J	HOB390 CH-2145	FUSION RC3b_1042	HOB198 FUNAI 48KEY	IR1628 FUNAI PC221	HOB423 CH-3259	ELENBERG Y27401	HOB354 ELENBERG	HOB071 CH-770	HOB122 CH-800		
077	078	079	080	081	082	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083	083		
HOB123 CH-900	HOB129 CH-3700	HOB151 BERICOM008	HOB189 HOB189	HOB264 RC-A3-01	HOB273 HOB273	EN-21662B	EN3C39DF	EN2A30	EN2B27	EN2B27D	EN2F30H	EN3A70	HISENSE	EN2BB27V	EN2BP27V	EN2BQ27V	HEN3C39V	HOB223 RC-L-05	HOB225 RC-L-06	HOB108 ACH-P-2	HOB149 BERICOM006	HOB150 BERICOM007	HOB206 EL-41UA299	HOB329 T15E01MT	HOB330 H-LCD32V6	HOB341 STV-LC1914W	HOB418 ZD-RC30	DMTECH	HOB262 HOB262	HOB344 HOF45A1-2		
097	098	099	100	101	102	103	104	105	106	107	108	109	110	111	112	112	112	112	112	112	112	112	112	112	112	112	112	112	112	112		
HOB249 PARS	HOB292 H502-2	HOB013 HOF-54B1.4	HOB339 GI S2138	HOB381 HOF12E148GPD5	HOB346 HOF10G705GPD9	SONIQ QT-112	SUNSTECH TL1970HD	HOB195 H-LCDDV2200	HOB196	HOB314 Singer LCKZG-108	HOB386 RM-611	HOB308 IR1492 SENCOR	HOB310	HOB404 CH CH-4870	STV-LC1585WL	RC1659	SW-V1	SW-V2	SW-V3	HOB382 GI HOF12B441GPD11	NF021FD-NF026RD	NF0399RD	NF0399RD	PC221 01	PC221 02	PC221 03	119 119	BC10SB BC10SB	daytron LCD TV	HOB358 RC-A03	RC A06	RC A10

