

# HUAYU®

## Air conditioner remote control K-1303E instruction manual

7000 IN 1 A/C UNIVERSAL



One Key ON/OFF

Automatic wind

Manual wind

Number for input code 1234567890

Time on

Time off

Room temperature

HUAYU K-1303E Universal A/C Remote

# K-1303E RU

## Способ настройки дистанционного управления

Руководство пользователя пультом дистанционного управления марки HUAYU. K-1303E - это новый универсальный пульт дистанционного управления 7000-в-1 для кондиционеров, разработанный нашей компанией. Перед использованием этого устройства впервые, пожалуйста, внимательно прочтите инструкцию по его эксплуатации. Это поможет вам лучше освоить управление пультом дистанционного управления. После первой установки аккумулятора без предварительной настройки пульта вы можете управлять кондиционерами 4 брендов (GREE, MIDEA, Panasonic/National, MITSUBISHI). Также вы можете выбрать необходимые параметры настройки с помощью данного руководства. Сохраните это руководство и после завершения настройки.

(Перед настройкой включите кондиционер, вставьте аккумулятор в пульт дистанционного управления и направьте пульт на приемный датчик кондиционера).



## Способ настройки дистанционного управления A: Настройка ввода кода - прямой ввод требуемого кода

(1) Узнайте код нужного вам бренда из "СПИСКА КОДОВ". Если у бренда несколько кодов, выберите для начала первый.

(2) Нажмите и отпустите кнопку "SELECT" (ВЫБРАТЬ), код, отображаемый на экране, начнет мигать, введите выбранный вами код. Каждый раз, когда вы будете вводить цифру, соответствующая ей позиция будет переставать мигать, а когда вы

## Параметры устройства:

функция часов, включение / выключение таймера, отображение внутренней температуры, отображение температуры в градусах по Фаренгейту / Цельсию.

полностью введете код, пульт дистанционного управления автоматически подтвердит выбранные параметры настройки и выйдет из режима настройки.




(3) Проверьте, работает ли кнопка дистанционного управления, если она не работает, продолжайте проделывать вышеуказанные действия, последовательно используя приведенные под нужным вам брендом коды.

## Способ настройки дистанционного управления B: Настройка ввода кода - увеличение или уменьшение кода


(1) Узнайте код нужного вам бренда из "СПИСКА КОДОВ". Если у бренда несколько кодов, выберите для начала первый.

(2) Нажмите и отпустите кнопку "SELECT" (ВЫБРАТЬ), код, отображаемый на экране, начнет мигать, введите выбранный вами код. Каждый раз, когда вы будете вводить цифру, соответствующая ей позиция будет переставать мигать, а когда вы

полностью введете код, пульт дистанционного управления автоматически подтвердит выбранные параметры настройки и выйдет из режима настройки.

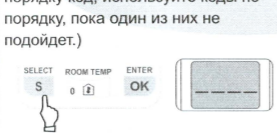

(2) Нажмите и отпустите кнопку "SELECT" (ВЫБРАТЬ), код, отображаемый на экране, начнет мигать. Нажмите "TEMP+" или "TEMP-", чтобы настроить текущий код, увеличив или уменьшив его на 1. Зажав "TEMP+" или "TEMP-", вы можете быстро увеличить или уменьшить вводимый код. Когда дойдете до нужного кода, нажмите на кнопку ввода ("ENTER"), чтобы подтвердить выбранный код и завершить настройку.




(3) Проверьте, работает ли кнопка дистанционного управления, если она не работает, продолжайте проделывать вышеуказанные действия, последовательно используя приведенные под нужным вам брендом коды.

## Способ настройки C: настройка через автоматический поиск - автоматическое добавление кода


(1) Нажмите и удерживайте кнопку "SELECT" (ВЫБРАТЬ) в течение 3 секунд, а затем отпустите ее. Пульт дистанционного управления войдет в режим автоматического поиска. Код замигает и начнет обновляться. Когда кондиционер ответит, быстро нажмите на любую

кнопку, чтобы подтвердить код и выйти из режима настройки (вы должны успеть нажать на кнопку, иначе начнут отображаться последующие коды, которые не подходят, и вам придется дожидаться нового кода заново).

(2) Проверьте, работает ли кнопка дистанционного управления, если она не работает, продолжайте поиск в соответствии с вышеприведенным способом.

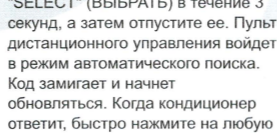

кнопку, чтобы подтвердить код и выйти из режима настройки (вы должны успеть нажать на кнопку, иначе начнут отображаться последующие коды, которые не подходят, и вам придется дожидаться нового кода заново).




(2) Проверьте, работает ли кнопка дистанционного управления, если она не работает, продолжайте поиск в соответствии с вышеприведенным способом.

## Способ настройки D: настройка через автоматический поиск - добавление кода вручную

(1) Нажмите и удерживайте кнопку "SELECT" (ВЫБРАТЬ) в течение 3 секунд, а затем отпустите ее. Пульт дистанционного управления войдет в режим автоматического поиска. Код замигает и начнет обновляться. Когда кондиционер ответит, нажмите на кнопку ввода ("ENTER"), чтобы подтвердить код и выйти из режима настройки.

(2) Проверьте, работает ли кнопка дистанционного управления, если она не работает, продолжайте поиск в соответствии с вышеприведенным способом.

(3) Проверьте, работает ли кнопка дистанционного управления, если она не работает, продолжайте проделывать вышеуказанные действия, последовательно используя приведенные под нужным вам брендом коды.

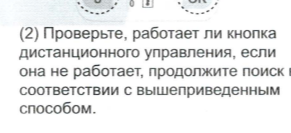

## Использование на пульте функции часов

(1) Зажмите и отпустите кнопку часов ("CLOCK"). Время, отображаемое на дисплее пульта начнет мигать.



(2) Нажимайте "TEMP+" или "TEMP-", чтобы настроить правильное время. (Зажмите и удерживайте "TEMP+" или "TEMP-" для быстрой настройки)




(3) Нажмите снова на кнопку часов ("CLOCK"), отображаемое время перестанет мигать, теперь настройка завершена и устройство вышло из режима настройки времени (Или подождите и просто не нажимайте никаких кнопок в течение 8 секунд, тогда режим настройки автоматически завершится и устройство выйдет из режима настройки времени).

## Использование на пульте функции таймер

A, таймер включения (используется, когда девайс выключен)

(1) Нажмите один раз кнопку "TIME ON", время таймера начнет мигать;



(2) Проверьте, работает ли кнопка дистанционного управления, если она не работает, продолжайте поиск в соответствии с вышеприведенным способом.

(2) Нажимайте "TIME+" или "TIME-", чтобы отрегулировать нужное время




(3) Нажмите снова на кнопку часов ("CLOCK"), отображаемое время перестанет мигать, теперь настройка завершена и устройство вышло из режима настройки времени (Или подождите и просто не нажимайте никаких кнопок в течение 8 секунд, тогда режим настройки автоматически завершится и устройство выйдет из режима настройки времени).

включения, подождите 8 секунд без проведения каких-либо операций, чтобы подтвердить настроенные параметры;



B, таймер выключения (используется, когда девайс включен)

(1) Нажмите один раз кнопку "TIME OFF", время таймера начнет мигать;



(2) Нажимайте "TIME+" или "TIME-", чтобы отрегулировать нужное время выключения, подождите 8 секунд без проведения каких-либо операций, чтобы подтвердить настроенные параметры;

B, выключение таймера



Подсказки:

(1) Зажмите и удерживайте "TIME+" или "TIME-" для быстрой настройки.

(2) Диапазон возможного для установки таймера времени составляет 24 часа.

(3) Нажмите "TIME ON" или "TIME OFF" дважды, таймер отменится и обратный отсчет исчезнет с дисплея.

(4) После установки таймера вам нужно направить пульт на датчик приема сигнала кондиционера и разместить в пульт на таком от него расстоянии, которое будет оставаться в пределах диапазона эффективной передачи сигнала, в противном случае таймер может не работать.

## Настройка нажатием одной кнопки

(1) Когда температура в помещении превысит 23 градуса по Цельсию, нажмите на кнопку "One Key", что автоматически включит режим проветривания с температурой в 26 градусов по Цельсию, средним потоком воздуха и автоматической настройкой его направления.




(2) Когда температура в помещении опустится ниже 24 градусов по Цельсию, нажмите на кнопку "One Key", что автоматически включит режим обогрева с температурой в 20 градусов по Цельсию, средним потоком воздуха и автоматической настройкой его.

(3) Если вас не устраивают параметры этого режима, вы можете подстроить их под себя.


## Сброс до заводских настроек

Одновременно зажмите и удерживайте на протяжении 5 секунд кнопки "SELECT" и "MODE", затем дисплей пульта загорится на 1 секунду. В это время система начнет сбрасываться, теперь все настройки пульта дистанционного управления возвращаются в исходное состояние.



Remote Control Setting Method.

(Before setting, please turn on the power of the air conditioner, install the battery on the remote control and aim it at the receiving window of the air conditioner)



brand from the "CODE LIST". If the brand has multiple codes, please select the first code first.

# K-1303E GB

Thank you for choosing HUAYU brand remote control products. K-1303E is the latest 7000-in-1 universal remote control for air conditioners developed by our company. Before using this product for the first time, please read the operating instructions carefully. This will help you better master the use of the remote control. After the product is installed with the battery for the first time, you can directly control 4 brands (GREE, MIDEA, Panasonic/National, MITSUBISHI) of air conditioners without setting it. You can also choose the setting method you need from the manual according to your needs. Please keep this manual after the setting is completed.

## Product features:

Clock function, Timing on / off function, Indoor temperature display function, Fahrenheit / Celsius temperature conversion.

## Remote Control Setting Method.

(Before setting, please turn on the power of the air conditioner, install the battery on the remote control and aim it at the receiving window of the air conditioner)



brand from the "CODE LIST". If the brand has multiple codes, please select the first code first.

## Remote Control Setting Method A: Code Input Setting - Enter the required code directly


(1) Find out the code of the desired brand from the "CODE LIST". If the brand has multiple codes, please select the first code first.

(2) Press the "SELECT" button and release it, the code displayed on the LCD screen will start to flash, enter the four-digit code you found in sequence. Each time you enter a digit, the corresponding position will stop flashing, and when the code input ends, the remote control will automatically confirm the setting and exit the setting mode.

(3) Test whether the key function of the remote control is valid, if it is invalid, continue to set other codes according to the above method.

(3) Test whether the remote control key function is valid, if it is invalid, continue to enter other codes under the brand according to the above method.

(3) Test whether the key function of the remote control is valid, if it is invalid, continue to set other codes according to the above method.



(3) Test whether the key function of the remote control is valid, if it is invalid, continue to set other codes according to the above method.

(3) Test whether the key function of the remote control is valid, if it is invalid, continue to set other codes according to the above method.

(3) Test whether the key function of the remote control is valid, if it is invalid, continue to set other codes according to the above method.

## Remote Control Setting Method B: Code Input Setting - Increase or decrease the current code

(1) Find out the code of the desired

brand from the "CODE LIST". If the brand has multiple codes, please select the first code first.

(2) Press and release the "SELECT" key once, and the code displayed on the LCD screen starts to flash.



Press "TEMP+" or "TEMP-" to adjust the current code to increase or decrease by 1, if you press and hold "TEMP+" or "TEMP-", you can quickly increase or decrease the code. When adjusting to the required code, press the "ENTER" key to confirm the code and exit the setting mode.

Press "TEMP+" or "TEMP-" to adjust the current code to increase or decrease by 1, if you press and hold "TEMP+" or "TEMP-", you can quickly increase or decrease the code. When adjusting to the required code, press the "ENTER" key to confirm the code and exit the setting mode.

Press "TEMP+" or "TEMP-" to adjust the current code to increase or decrease by 1, if you press and hold "TEMP+" or "TEMP-", you can quickly increase or decrease the code. When adjusting to the required code, press the "ENTER" key to confirm the code and exit the setting mode.

Press "TEMP+" or "TEMP-" to adjust the current code to increase or decrease by 1, if you press and hold "TEMP+" or "TEMP-", you can quickly increase or decrease the code. When adjusting to the required code, press the "ENTER" key to confirm the code and exit the setting mode.

Press "TEMP+" or "TEMP-" to adjust the current code to increase or decrease by 1, if you press and hold "TEMP+" or "TEMP-", you can quickly increase or decrease the code. When adjusting to the required code, press the "ENTER" key to confirm the code and exit the setting mode.

Press "TEMP+" or "TEMP-" to adjust the current code to increase or decrease by 1, if you press and hold "TEMP+" or "TEMP-", you can quickly increase or decrease the code. When adjusting to the required code, press the "ENTER" key to confirm the code and exit the setting mode.

## Setting method C: Auto search setting-add current code automatically

(1) Press and hold the "SELECT" button for 3 seconds and then release it. The remote control enters

the automatic search state. The code flashes and is updated by one code each time. When the air conditioner responds, quickly press any button to confirm and exit the setting mode (press the button at this time to be fast, if it is slow, it will cause the search to overstep and reach other codes which will not work, so you need to search again).



(2) Test whether the key function of the remote control is valid, if it is invalid, continue searching according to the above method.

**D**  
**Setting method D:**  
**Automatic search setting-manually add the current code**

(1) Press and hold the "SELECT" button for 3 seconds and then release it. The remote control enters the automatic search state. Each time you press the "SELECT" button, the code flashes and increments by 1 to update. When the air conditioner responds, press "ENTER" key confirms the code and exits the setting mode.



(2) Test whether the key function of the remote control is valid, if it is invalid, continue searching according to the above method.

**Using the remote control clock function**

(1) Press the "CLOCK" key once and then release it. The time on the remote control display starts to flash.



(2) Press "TIME+" or "TIME-" to adjust to the correct time. (Press and hold "TIME+" or "TIME-" for quick adjustment)



(3) Press the "CLOCK" button again, the clock stops blinking, the setting is completed and the time setting mode is exited. (Or wait for 8 seconds without any operation, and then automatically confirm and exit the time setting mode).

**The use of remote control timing function**

A. timing on (used when the remote control is off)

(1) Press the "TIME ON" button once, and the timing on time starts to flash;




(2) Press "TIME+" or "TIME-" to adjust to the required power-on-time, wait for 8 seconds without any operation, and then automatically confirm;



B. timing off (used when the remote control is turned on)

(1) Press the "TIME OFF" button once, and the timing on time starts to flash;



(2) Press "TIME+" or "TIME-" to adjust to the required shutdown time, and wait for 8 seconds without any operation, and then automatically confirm.



**Tips:**  
(1) Press and hold "TIME+" or "TIME-" for quick adjustment  
(2) The settable time range is 24 hours.  
(3) Press the "TIME ON" or "TIME OFF" button twice continuously, the timing will be cancelled and the timing time will disappear on the LCD screen.  
(4) After setting the timing, you need to point the transmitter's transmitting direction to the air conditioner's receiving direction within the effective range of the remote control, otherwise the timing may be invalid.

**Use of One Key function**

(1) When the indoor temperature is higher than 23 degrees Celsius, press the "One Key" button, it will automatically switch the mode to air-conditioning, the temperature is automatically set at 26 degrees Celsius, the air volume is medium, and the wind direction is automatic.



(2) When the indoor temperature is lower than 24 degrees Celsius, press the "One Key" button, it will automatically switch the mode to the warm room, the temperature is automatically set at 20 degrees Celsius, the air volume is medium, and the wind direction is automatic.

(3) If you are not satisfied with the default state of this mode, you can adjust it according to your needs.

**Restore Factory Mode**

Press the "SELECT" button and the "MODE" button at the same time, after about 5 seconds, the LCD screen of the remote control will light up for 1 second. At this time, the system is reset and all the settings of the remote control return to the factory initial state.



**Code List/Список кодов**

Brand/Бренд	Model Code/Бренд-код
ALPIN	0252-0253, 1277, 1790
AIRWELL	0555, 0556, 1250, 1956
AUCMA	0288-0296, 0615-0616, 0675, 1679
AUX	0297-0300, 0679, 0692, 0696, 1834, 3080
BOERKA	0383, 0434, 0436-0437, 1773
CARRIER	0203-0209, 0482-0486, 0563, 0564, 0565
CHANGHONG	0301-0308, 0617-0619, 0636, 2350, 3088
CHIGO	0379-0382, 0515, 0648-0653, 1915, 2990
CHOFU	0184-0187, 1574, 3658
CHUNLAN	0345-0350, 0453, 0620, 0637, 2220, 2435, 3132
CORONA	0155-0163, 0459, 0858, 2250, 2998
COMFOR STAR	0613, 1123, 1308, 2269, 2478, 3001
CONROWA	0377, 0889, 1315, 2939, 3517, 3972
DAIKIN	0171-0183, 0566, 0567, 0583, 0621-0625
DECODING	0647, 1344, 2741, 2598, 3549
DOCTOR	0221, 0449, 1475, 3807, 3896

DONGBAO	0355-0361, 1888, 2990, 2991, 3147
DONGXINBAO	0413, 0874, 0983, 1236, 1489, 1975
ELECTRA	0557, 1252, 1947, 2642
Electrolux	0216-0220, 0560, 0569, 0594-0598, 1255
FEDDERS	0528, 1223, 1227, 3145
FRESTECH	0277, 0519, 0520, 0601, 0602, 0655, 0972, 1214, 1350
FUJITSU	0127-0137, 0552, 0553, 0554, 0626, 0681-0682, 1247, 1525, 2212
FUNAI	0430, 0481, 1125, 2684
GUQIAO	0244, 0491, 0939, 1116, 3999
GALANZ	0371-0372, 0521, 0638-0639, 1066, 2457
GLEE	0398-0399, 0934
GOLDSTAR	0201, 0466-0469, 0572, 0600, 1591
GREE	0309-0316, 0512, 0513, 0689-0691, 0693, 0697
HAIER	0266-0272, 0627-0628, 0694, 1457
HISENSE	0332-0335, 0517, 0609, 0610, 0632
HITACHI	0118-0126, 0500, 0501, 0665-0674

HUABAO	0336-0344, 0641, 2384, 2903
HUAKE	0408, 0920, 1501, 3480
HUAMEI	0402, 0460-0465, 2962, 3986
HUALING	0317-0325, 0629-0631, 2365, 3524
HUIFENG	0370, 2418, 3442
HUIKANG	0368, 0441-0443, 1978, 3440
HYUNDAI	0202, 0433, 0551, 3552
JDC	0373, 0440, 2488, 3957
JIANGNAN A/C	0432
JINDA	0414, 1479, 3678
JINSONG	0389-0391, 0446-0448, 2028, 3829
JOHSON	0245, 0492, 3487, 3543
KANGLI	0374-0375, 1069, 2442
KELON	0282-0287, 0606, 0642-0643
KLIMATAIR	0225-0226, 0452, 3297
KOLIN	0416-0418, 2466, 3488
KONKA	0397, 0457-0459, 3017
LEHUA	0369, 0438-0439, 2258, 3712
LG	0197-0200, 0504, 0514, 0677, 0684-0685, 2248

LIANGYU	0233, 0451, 1987, 2149
LITTLE DUCK	0530, 1014, 2736, 3698, 3981
LOREN-SEBO	0255, 0471, 0472, 2009, 3637
MACQUAY	0234-0237, 0465, 1489, 2746
MIDEA	0260-0265, 0526, 0631, 0686-0688
MINGXING	0590
mitsubishi	0001-0045, 0476-0479, 0547, 0558, 0568, 0582, 0591, 0645, 0646, 0698
NORITZ	0431, 3211
OMEGA	0559, 3214, 3256, 3589
Panasonic National	0138-0154, 0658-0660, 0676, 2919
PANDA	0378, 0963, 1592, 3844
PHILCO	0210-0211, 0487-0490, 3967
PROTON	0421-0423, 2153
RAYBO	0362-0367, 2410, 3439
ROWA	0527, 0531, 0644
Sabro	0435, 0506-0508, 0948, 3588

SAJO DENKI	0212-0215, 0725, 2252
SAMPO	0424-0426, 1150, 3699
SAMSUNG	0188-0196, 0503, 0518, 0661-0664, 0680
SANYO	0046-0095, 0529, 0604, 0605, 0683, 1070
SASUKI	0254, 0470, 1494, 2819
SAST	0633
SHANGLING	0384-0388, 0444-0445, 3409
SHANXING	0384-0388, 0444-0445, 3409
SHARP	0096-0106, 0525, 0603, 0634, 0678, 1122
SHENGFENG SHUANGLU	0376, 0480
SHINCO	0351-0354, 0454-0456, 1046, 1742
SHUANGLU	0404-0407, 0656-0657, 1400, 3147
SONGGE	0428-0429, 1672, 3487
SOVE	0409-0410, 1478, 2215
SWAN	0524, 1213, 1562, 2999
SUMMER	0427, 1379, 3646, 3998
SUNDURG	0257, 0505, 3124, 3357, 3876
TADIRAN	0246-0251, 0759, 1787
TATUNG	0419-0420, 2980, 3499

TCL	0273-0281, 0570, 0635, 3694, 3782
TECO	0256, 0473-475, 0516, 1193
TIANDI, MICOM	0415, 1452, 2464
TOSHIBA	0107-0117, 0493-0499, 0561, 0562
TOYO	0614, 3123, 3467
TRANE	0227-0232, 0589, 1236, 1587, 1969
UNI-AIR	0222-0224, 0450, 1999
WEILI	0393-0396, 1783
Whirlpool	0164-0170, 0502, 0607, 0608, 1554, 1987
XILENG	0411-0412, 1106, 3625
XINLE	0400-0401, 1095, 1773
YANGTZE	0403, 3663, 3749
YANGZI	0654, 2044
YAOMA	0599, 1024
YINYAN	0326-0331, 0258-0259, 0592-0593, 3358
YORK	0238-0243, 0681, 0695, 0995