HUAYU® English

RM-H1263 PLUS 2

Instruction for UNIVERSAL Home theater REMOTE CONTROLLER

Introduction:

RM-H1263 PLUS 2 is the newest universal Home theater remote controller, Comprehensive care at different levels need, it can control old or new Home theater, famous brand or un-famous brand Home theater, nearly all models for Home theater. Commonly used functions and menu button all including.Easy setup, conveniently use, it is the bes choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.

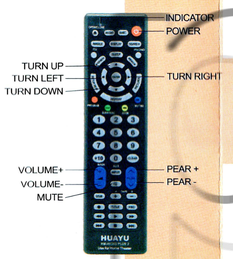

Methods for setting remote controller:

This remote controller has the following methods for setup , you can choose any of them.

****

A. Inputting code:

1, Turn on your TV set, let your DVD set be in the normal state play, and aim the remote controller in the front of the DVD. Find the three digits code from the code list.

2, Press "POWER" button, then press "OPEN/CLOSE" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.



3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off., setting to be finished. If the code is more than one set, please use first one at first

4, Test other function buttons can work well or not, such as"OPEN /CLOSE". If not, repeat steps 2 to 3, until you find the suitable code.

B. Manually searching for the code:

1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the DVD.

2, Press "POWER" button, then press "OPEN/CLOSE" button, till the indicator lamp lights, then release the button, the remote controller will be in the state of Manually searching for the code.

3, Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.

4, Till the volume symbol appears on your TV, test other function buttons (except POWER, and VOLUME button) can work well or not, such as "OPEN/CLOSE". If not, repeat steps 2 to 3, If they work well, press the "POWER" button immediately and the work light would be off, set finished.

C. Automatically searching code:

1, Turn on your TV set, let your DVD set be in the normal state play, and aim the remote controller in the front of theDVD.



2, Press and hold the "POWER" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the VOLUME symbol appears on your TV or not, if yes, please release "POWER" button at once, set finished.



3, Test other function buttons canwork well or not, such as"OPEN/CLOSE". If not, repeat steps 2 to 3, until you find the suitable code.

D. Restore factory Settings

Press "POWER" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

Warm Tips

If you have any problems when you set or use this remote controller, please try to do as follow:

• When you set this remote controller, please do according to the steps of the method "inputting Code". If it can't control your device, Please input the other codes according to sequence.

• If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.

• when you use the method "Manually searching for the code" , because the codes are too much, you need to wait patiently

B0064095

HUAYU® **RM-H1263 PLUS 2**

059	PIONEER BD
060	Panasonic BD
061	Philips BD
062	RCA BD
063	SAMSUNG BD
064	RM-ADU047
064	SONY RM -ADU047
065	SONY RM -AMU001
065	SONY RM -AMU005
066	SONY RM -ANU186
067	RM-S33
068	RC-2802
069	PHP51-3594
070	HOME THEATER SYSTEM
071	AK59-00104R
072	AK59-00148A
073	AK59-00140A
074	AH59-02407A
075	N2QAJB000137
076	Sony BD
077	TOSHIBA BD
078	TOSHIBA BD 2
079	VERTEX BD
080	Aiwa Deck
081	Denon Deck 1
082	JVC Deck SEC330U
083	Victor & JVC RM-RXC7k
084	Kenwood G4
085	Kenwood Double Volume
086	attach picture with KENWOOD Deck RC39
086	KENWOOD Deck RC39
087	Panasonic Deck 1
088	Panasonic Deck 2
089	Panasonic Deck 3
090	Panasonic Deck 4
091	Panasonic Deck 5
092	Panasonic Deck 6
093	Pionner A1
094	Pionner Z91
095	Pionner CU-XR008
096	N2QAYB000281
097	N2QAJB000142
098	HOME THEATER SYSTEM
099	BLU-RAY DISC PLAYER BDP7300
100	AKB72976002
101	AKB73295901
102	AKB73275502
103	AKB73636108
104	Sanyo Deck 1
105	Sanyo Deck 2
106	Sharp MD
107	Sony Deck 2
108	Sony Deck 3
109	Aiwa.2 CAS13
110	Aiwa 3 RCT10LE
111	Aiwa.4 EX 50
112	Aiwa 5 RCSR7
113	Aiwa.6 TZ92MF.HOM
114	AKAI. HOM
115	AUREX. RM.L23. HOM
116	KENWOOD. RC.ME.3.
117	ONKYO. RC.333C . HOM
118	KENWOOD RC.RO.802. HOM
119	SANSUI RSC3
120	SHARP HOM
121	SHARP G0040AWSA. HOM
122	STRASSER.T. 160. HOM
123	DENON URC.3030. HOM
124	AKB37026822
125	AKB69491501
126	AKB37026802
127	AKB37026832
128	AKB72216901
129	N2QAHB000064
130	N2QAYB000205
131	N2QAJB000138
132	N2QAYB000006
133	LRIPL PH HT19
134	LRIPL MULTIMEDIA
135	MARANTZ. RC.5001SR. HOM
136	MBD.300 BD
137	QRIOM. BD
138	WINTECH BRD 100 BD
139	YAMAHA RCX. HOM
140	TOSHIBA BD
141	SONY RM-ADU078 HOM
142	AXD7653
143	Toshiba

HUAYU® RM-H1263 PLUS 2

144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	163	164	165	166	167	168
RM.SP400	Samsung theater	PIONEER	Toshiba HD DVD	Toshiba blu-Ray	Sony AV system	SAMSUNG HOME	UBL	AKAI	LG	PACIFIC	LRIPL PH-22 PH-29	LRIPL	LRIPL HT40	PHILIPS	LRIPL HT17	SANSUI	YAMAHA RAV 160	YAMAHA 110	POLYTRON	POLYTRON	DX ARCADREC BLURAY	QTEAC BLURAY	SHARP BLURAY	SONY AUDIO SYSTEM AMU084	SONY ADU162

169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193
YAMAHA	OPERA DATA	MPGE4 HP BD	ANTHEM	ANTHEM 2	UBL2	SONY MDX10	SONY RM SD80	SONY FS100	SONY SR 100	SONY ADU083	YAMAHA RAV190	Bose	HARMAN KARDON	KENWOOD RC-85	PACIFIC	SAMSUNG 695G	Samsung	SANYO	3G AUDIO	211E	AAWA	ANPM3 PLAYER YD-360BT	BGM	CW-217Q

194	195	196	197	198	199	200	200	200	200	201	202	202	203	204	205	206	207	208	195	210	211	211	211	211
FOR THE DVD PLAYER	Micronsonic mini4015	MK-10+08LED	MS-UXG650	YD-506BT	YD-808BT	A111F-F2200U-A555U F900U 4 IN 1	F&D-A111F	F&D-F700U	F&D-F3000	F&D A-83	F&D HT F 6000 02	F&D HT F 6000	URC-25 RR168 F&D HT	I BALL HT 02	I BALL HT SLIM	I BALL HT	I-BALL HT	INTEX IT-5400FM	RR INTEX HT 02FD	RR INTEX IT-250U	RR INTEX IT-411 HT	RR INTEX IT 411-IT1800 SUF HT	IT-1875 SU IT-2615-IT-2625	RR INTEX MINI

HUAYU

HUAYU® **RM-H1263 PLUS 2**

212	213	214	215	216	217	218	218	219	220	221	222	223	224	224	225	226	227	228	229	230	231	232	233	234	235	236
RR INTEX IT-12000 SUF	RR INTEX IT X5900	RR IN-TX INT NEW 857	RR RR17 INTEX 5.1 CH	RR RR155 INTEX HT FM-USB	INTEX IT-281 SUF	IT-4650-4850 FM (3IN1)	NTEX IT-5800P	RR RR167 IT-5400 FM	RR RR170 INTEX HT	RR RR255 IT-475 SUF	RR RR255 IT-5850 SUF	RR MITSUN HT 13	RR MITSUN HT1	RR MITSUN HT2	RR MITSUN HT3	RR MITSUN HT5	RR MITSUN HT6 NEW	RR MITSUN HT7 NEW2	RR MITSUN HT9 MIT-7000	RR MITSUN HT11 688	RR MITSUN HT12 C	RR MITSUN HT14 FM	RR MITSUN HT15	RR MITSUN HT16 FM2	RR MITSUN HT17	RR RR167 MITSUN HT4 SMALL

237	238	239	242	241	242	243	243	244	245	246	248	250	251	251	200	205	209	231	240	247	249
RR RR255 MITSUN HT8 DVD FM-IT-475 SUF 2IN1	RR RR255 MITSUN HT10 USB	PHELIPS HD PROLOGIC	PHELIPS HD USB	PHILIPS HT ANDA	PHILIPS HT SMALL	PHILIPS HT TUN+	RR PHILPS PH668 HT	RR PH22-29 HT 21N1	RR PH43 HT	RR PH44 HT	RR PHILIPS HT 5.1	RR RR233 URC53 PHILIPS HT	RR PH45 HT	RR100 PHILIPS HT	F&D F3000U RR155	I-BALL HT RR281 SMALL	ZEBRONICS HT3 SMALL	ZEBRONICS HT2	ZEBRONICS HT RR281	F&D 380HT RR33	F&D IT-6000 SUF RR160

HUAYU

B0064096